



## Minimum 270 in-lb Torque

- For damper areas up to 66 sq-ft\* (For lower torque, see AFB, AF, NFB, LF, or TF series)


## Applications

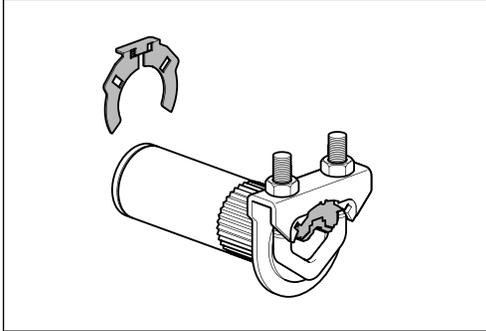

New standard clamp fits standard 1/2" shafts to 1.05" jackshafts.

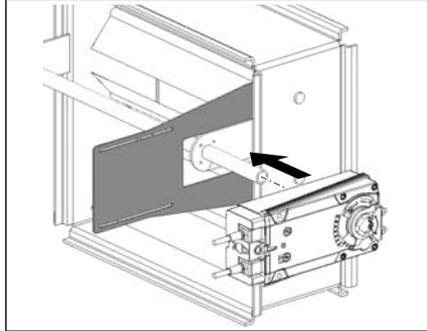

Mount directly to 1.05" jackshafts. (new ZG-120 bracket shown)

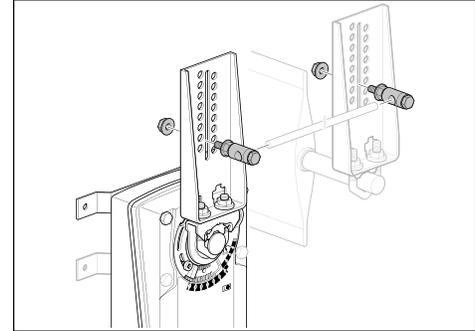

Linkage solutions are available when direct coupling is not possible.



All Actuators have BDCM

### EFB, EFX Series - At A Glance

	EFB24, EFX24 (p. 21)	EFB24 N4, EFX24 N4 (p. 23)	EFB24-S, EFX24-S (p. 21)	EFB24-S N4, EFX24-S N4(H) (p. 23)	EFB120, EFX120 (p. 25)	EFB120-S, EFX120-S (p. 25)	EFB120-S N4, EFX120-S N4(H) (p. 27)	EFB24-SR, EFX24-SR (p. 29)	EFB24-SR N4 (p. 31)	EFB24-SR-S, EFX24-SR-S (p. 29)	EFB24-SR-S N4, EFX24-SR-S N4(H) (p. 31)	EFB24-MFT, EFX24-MFT (p. 33)	EFB24-MFT-S, EFX24-MFT-S (p. 33)	EFB24-MFT-S N4, EFX24-MFT-S N4(H) (p. 35)	
Torque:	270 in-lb	●	●	●	●	●	●	●	●	●	●	●	●	●	
Power supply:	24 VAC/DC	●	●	●	●	●	●	●	●	●	●	●	●	●	
	120 VAC					●	●	●	●	●	●	●	●	●	
	230 VAC					●	●	●	●	●	●	●	●	●	
Control signal:	On/Off	●	●	●	●	●	●								
	2 to 10 VDC							●	●	●	●				
	Multi-function**											●	●	●	
Feedback signal:	2 to 10 VDC							●	●	●	●				
	VDC variable**											●	●	●	
Running time motor:	75 seconds	●	●	●	●	●	●								
	95 seconds							●	●	●	●				
	Adj. 60 to 150 seconds***											●	●	●	
	spring: <20 seconds	●	●	●	●	●	●	●	●	●	●	●	●	●	
Brushless DC Motor	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
External direction of rotation switch								●	●	●	●	●	●	●	
Manual override	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
Appliance rated cable, 18 GA <sup>†</sup> (default)	●		●		●	●		●		●		●	●		
Plenum rated cable, 18 GA (optional)	●							●				●			
Built-in auxiliary switch, Two SPDT			●	●		●	●			●	●		●	●	
NEMA 4 rated housing		●		●			●		●		●			●	
Installation instructions.....(p. 37-43)	General wiring.....(p. 45)				Start-up and checkout.....(p. 46)				Electrical operations.....(p. 44)						

\*Based on 4 in-lb/ft<sup>2</sup> damper torque loading. Parallel blade. No edge seals. \*\*Default 2 to 10 VDC. \*\*\*Default 150 seconds.

# A CLOSER LOOK...

- Cut labor costs with simple direct coupling.
- True mechanical spring return – the most reliable fail-safe.
- Reverse mount for clockwise or counterclockwise fail-safe.
- Check damper position easily with clear position indicator.
- Overload-proof throughout rotation
- Temporary restrictions in damper movement will not change actuator operation. Actuator returns to normal operation when restriction is removed (modulating actuators).
- Built-in mechanical stop to adjust angle of rotation.
- By eliminating internal condensation incorporated breather membrane optimizes performance in harsh airstream environments.
- Built-in auxiliary switches is easy to use, offers feedback or signal for additional device (-S models).
- Manual override crank speeds installation
- Need to change control direction? Do it easily with a simple switch (modulating actuators).
- Microprocessor-controlled brushless DC motor increases actuator life span and reliability, provides constant running time (modulating actuators).
- Rugged metal on plastic housing withstands rough handling in the mechanical room.
- Standard 3 ft. appliance cable and conduit connector eases installation.
- Double insulated – no need for separate safety ground. A Belimo exclusive (-S models).
- Automatically compensates for damper seal wear, ensuring tight close-off.
- Added Flexibility to Select Clamp, Electrical Connection, and Running Time to fit your Specific Application with Belimo's Flexible Line of Actuators (EFX).



## The Belimo Difference

- **Customer Commitment.**  
Extensive product range. Application assistance.  
Same-day shipments. Free technical support. Five year warranty.
- **Low Installation and Life-Cycle Cost.**  
Easy installation. Accuracy and repeatability.  
Low power consumption. No maintenance.
- **Long Service Life.**  
Components tested before assembly. Every product tested before shipment.  
30+ years direct coupled actuator design.

M40103 - 09/11 - Subject to change. © Belimo Aircontrols (USA), Inc.

# EFB24, EFB24-S, EFX24, EFX24-S

On/Off, Spring Return, 24 V



Technical Data		EFB24, EFB24-S, EFX24, EFX24-S
Power supply		24 VAC ± 20% 50/60 Hz 24 VDC +20% / -10%
Power consumption	running	9.5 W
	holding	4.5 W
Transformer sizing		16 VA (class 2 power source)
Electrical connection		
	EFB24...	3 ft, 18 GA appliance cable, 1/2" conduit connector
	-S models:	two 3 ft, 18 gauge appliance cables with 1/2" conduit connectors
	EFX24...	3 ft [1m], 10 ft [3m] or 16 ft [5m] 18 GA appliance or plenum cables, with or without 1/2" conduit connector
	-S models:	two 3 ft [1m], 10 ft [3m] or 16 ft [5m] appliance cables, with or without 1/2" conduit connectors
Overload protection		electronic throughout 0 to 95° rotation
Control		on/off
Torque		270 in-lb [30 Nm] minimum
Direction of rotation	spring	reversible with CW/CCW mounting
Mechanical angle of rotation		max. 95° (adjustable with mechanical end stop, 35° to 95°)
Running time	motor	75 seconds
	spring	< 20 seconds @ -4°F to 122°F [-20°C to 50°C]; < 60 seconds @ -22°F [-30°C]
Position indication		visual indicator, 0° to 95° (0° is full spring return position)
Manual override		5 mm hex crank (3/16" Allen), supplied
Humidity		max. 95% RH non-condensing
Ambient temperature		-22°F to 122°F [-30°C to 50°C]
Storage temperature		-40°F to 176°F [-40°C to 80°C]
Housing		Nema 2, IP54, Enclosure Type2
Housing material		aluminum diecast and plastic casing
Agency listings †		cULus acc. to UL60730-1A/-2-14, CAN/CSA E60730-1:02, CE acc. to 2004/108/EC & 2006/95/EC
Noise level		≤56.5dB(A) motor @ 75 seconds ≤71.4dB(A) spring return
Servicing		maintenance free
Quality standard		ISO 9001
Weight		9.82 lbs [4.45 kg], 10.14 lbs [4.6 kg] with switches
† Rated Impulse Voltage 800V, Type of action 1.AA (1.AA.B for -S version), Control Pollution Degree 3.		
<b>EFB24-S, EFX24-S</b>		
Auxiliary switches		2 x SPDT 3A (0.5A) @ 250 VAC, UL approved one set at +10°, one adjustable 10° to 85°

**Torque min. 270 in-lb, for control of air dampers**

## Application

For on/off, fail-safe control of dampers in HVAC systems. Actuator sizing should be done in accordance with the damper manufacturer's specifications. Control is On/Off from an auxiliary contact, or a manual switch.

The actuator is mounted directly to a damper shaft up to 1.05" in diameter by means of its universal clamp. A crank arm and several mounting brackets are available for applications where the actuator cannot be direct coupled to the damper shaft.

## Operation

The EFB and EFX series actuators provide true spring return operation for reliable fail-safe application and positive close off on air tight dampers. The spring return system provides constant torque to the damper with, and without, power applied to the actuator.


The EFB and EFX series provides 95° of rotation and is provided with a graduated position indicator showing 0° to 95°.

The actuator may be stalled anywhere in its normal rotation without the need of mechanical end switches.

The EFB24-S and EFX24-S versions are provided with two built-in auxiliary switches. These SPDT switches are provided for safety interfacing or signaling, for example, for fan start-up. The switching function at the fail-safe position is fixed at +10°, the other switch function is adjustable between +10° to +85°. The EFB24, EFB24-S, EFX24 and EFX24-S actuator is shipped at +5° (5° from full fail-safe) to provide automatic compression against damper gaskets for tight shut-off.

**Installation Note:** Use flexible metal conduit. Push the UL listed conduit fitting device over the actuator's cable to butt against the enclosure. Screw in conduit connector. Jacket the actuators input wiring with UL listed flexible conduit. Properly terminate the conduit in a suitable junction box.

## Dimensions (Inches [mm])

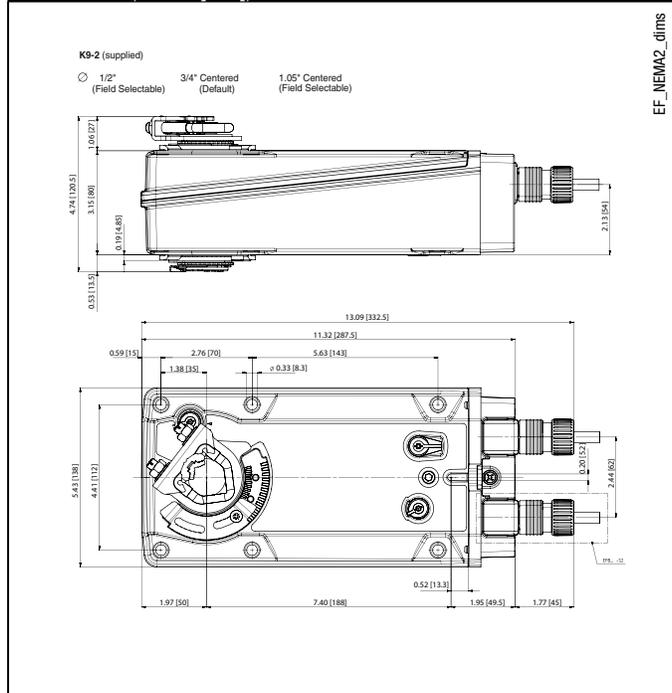

M40103 - 09/11 - Subject to change. © Belimo Aircontrols (USA), Inc.

**Accessories**

IND-EFB	Damper position indicator
KH-EFB	Crank arm
K9-2	Universal clamp for up to 1.05" diameter jackshafts
TF-CC US	Conduit fitting
Tool-07	13 mm wrench
ZG-EFB	Crank arm adaptor kit

Note: When using EFB24, EFB24-S, EFX24, EFX24-S actuators, only use accessories listed on this page.

For actuator wiring information and diagrams, refer to Belimo Wiring Guide.

**Typical Specification**

On/Off spring return damper actuators shall be direct coupled type which require no crank arm and linkage and be capable of direct mounting to a jackshaft up to a 1.05" diameter. The actuators must be designed so that they may be used for either clockwise or counterclockwise fail-safe operation. Actuators shall be protected from overload at all angles of rotation. If required, two SPDT auxiliary switch shall be provided having the capability of one being adjustable. Actuators with auxiliary switches must be constructed to meet the requirements for Double Insulation so an electrical ground is not required to meet agency listings. Actuators shall be cULus Approved and have a 5 year warranty, and be manufactured under ISO 9001 International Quality Control Standards. Actuators shall be as manufactured by Belimo.

**Wiring Diagrams**
**INSTALLATION NOTES**


- 1 Provide overload protection and disconnect as required.
- 2 **CAUTION Equipment Damage!**  
Actuators may be connected in parallel.  
Power consumption and input impedance must be observed.
- 3 Actuators may also be powered by 24 VDC.
- 4 For end position indication, interlock control, fan startup, etc., EFB24-S and EFX24-S incorporates two built-in auxiliary switches: 2 x SPDT, 3A (0.5A) @250 VAC, UL Approved, one switch is fixed at +10°, one is adjustable 10° to 85°.

**APPLICATION NOTES**

- ◆ Meets cULus requirements without the need of an electrical ground connection.

**WARNING Live Electrical Components!**

During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

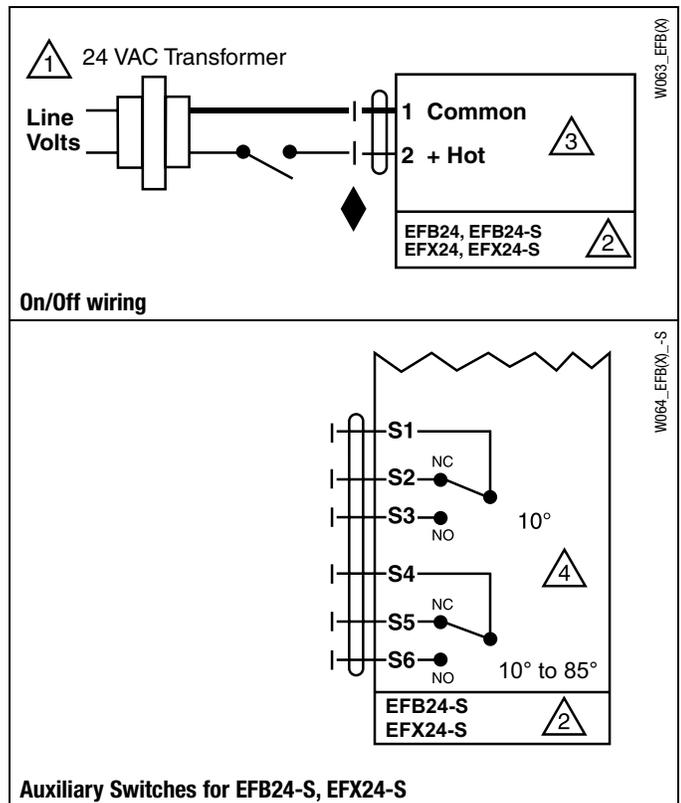

# EFB24 N4, EFB24-S N4, EFX24-S N4(H)

NEMA 4, On/Off, Spring Return, 24 V



Technical Data		EFB24 N4, EFB24-S N4, EFX24-S N4(H)
Power supply		24 VAC ± 20% 50/60 Hz 24 VDC +20% / -10%
Power consumption	running	9.5 W / heater 21 W
	holding	4.5 W
Transformer sizing		16 VA (class 2 power source) / heater 21 VA
Electrical connection		terminal block(s) inside junction box with knockouts
Overload protection		electronic throughout 0 to 95° rotation
Control		on/off
Torque		270 in-lb [30 Nm] minimum
Direction of rotation	spring	reversible with CW/CCW mounting
Mechanical angle of rotation		max. 95° (adjustable with mechanical end stop, 35° to 95°)
Running time	motor	75 seconds
	spring	< 20 seconds @ -4°F to 122°F [-20°C to 50°C]; < 60 seconds @ -22°F [-30°C]
	spring (w/heater)	< 20 seconds @ -22°F to 122°F [-30°C to 50°C]; < 60 seconds @ -40°F [-40°C]
Position indication		visual indicator, 0° to 95° (0° is full spring return position)
Manual override		5 mm hex crank (3/16" Allen), supplied
Humidity		max. 95% RH non-condensing
Ambient temperature		-22°F to 122°F [-30°C to 50°C]
	with heater	-40°F to 122°F [-40°C to 50°C]
Storage temperature		-40°F to 176°F [-40°C to 80°C]
Housing		NEMA 4, IP66, Enclosure Type4
Housing material		aluminum diecast and plastic casing
Agency listings †		cULus acc. to UL60730-1A/-2-14, CAN/CSA E60730-1:02, CE acc. to 2004/108/EC & 2006/95/EC
Noise level		≤56.5dB(A) motor @ 75 seconds ≤71.4dB(A) spring return
Servicing		maintenance free
Quality standard		ISO 9001
Weight		10 lbs [4.54 kg], 10.1 lbs [4.59 kg] with heater
† Rated Impulse Voltage 800V, Type of action 1.AA (1.AA.B for -S version), Control Pollution Degree 4.		
<b>EFB24-S N4, EFX24-S N4(H)</b>		
Auxiliary switches		2 x SPDT 3A (0.5A) @ 250 VAC, UL approved one set at 10° and one set at 85°

**Torque min. 270 in-lb, for control of air dampers**

## Application

For On/Off, fail-safe control of dampers in HVAC systems. Actuator sizing should be done in accordance with the damper manufacturer's specifications. Control is On/Off from an auxiliary contact, or a manual switch.

The actuator is mounted directly to a damper shaft up to 1.05" in diameter by means of its universal clamp. A crank arm and several mounting brackets are available for applications where the actuator cannot be direct coupled to the damper shaft.

## Operation

The EFB N4 and EFX N4 series actuators provide true spring return operation for reliable fail-safe application and positive close off on air tight dampers. The spring return system provides constant torque to the damper with, and without, power applied to the actuator.


The EFB N4 and EFX N4 series provides 95° of rotation and is provided with a graduated position indicator showing 0° to 95°.

The actuator may be stalled anywhere in its normal rotation without the need of mechanical end switches.

The EFB24-S N4 and EFX24-S N4 versions are provided with two built-in auxiliary switches. These SPDT switches are provided for safety interfacing or signaling, for example, for fan start-up. The switching function at the fail-safe position is fixed at +10°, the other switch function is fixed at 85°. The EFB24 N4, EFB24-S N4 and EFX24-S N4(H) actuator is shipped at +5° (5° from full fail-safe) to provide automatic compression against damper gaskets for tight shut-off.

**Installation Note:** Use 60°C/75°C copper (CU) conductor and wire size range 12-26 AWG, stranded or solid. If conduit is used, use flexible metal conduit; UL listed and CSA Certified Strain Relief or Conduit Fitting suitable for outdoor applications, rated NEMA type 4, 4X, 6 or 6X or watertight.

## Dimensions (Inches [mm])

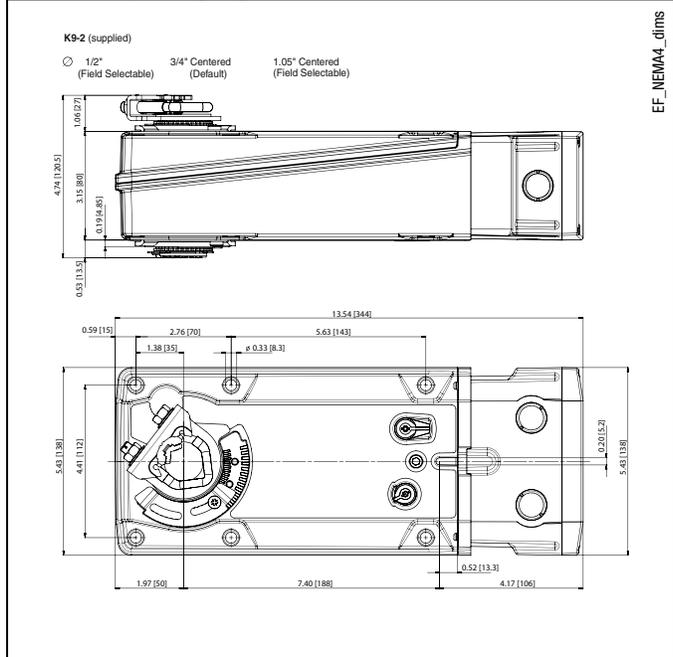

M40103 - 09/11 - Subject to change. © Belimo Aircontrols (USA), Inc.

**Accessories**

IND-EFB	Damper position indicator
KH-EFB	Crank arm
K9-2	Universal clamp for up to 1.05" diameter jackshafts
Tool-07	13 mm wrench
ZG-EFB	Crank arm adaptor kit

Note: When using EFB24 N4, EFB24-S N4, EFX24-S N4(H) actuators, only use accessories listed on this page.

For actuator wiring information and diagrams, refer to Belimo Wiring Guide.

**Typical Specification**

On/Off spring return damper actuators shall be direct coupled type which require no crank arm and linkage and be capable of direct mounting to a jackshaft up to a 1.05" diameter. The actuators must be designed so that they may be used for either clockwise or counterclockwise fail-safe operation. Actuators shall be protected from overload at all angles of rotation. If required, two SPDT auxiliary switch shall be provided. Actuators with auxiliary switches must be constructed to meet the requirements for Double Insulation so an electrical ground is not required to meet agency listings. Actuators shall be cULus Approved and have a 5 year warranty, and be manufactured under ISO 9001 International Quality Control Standards. Actuators shall be as manufactured by Belimo.

**Wiring Diagrams**
**INSTALLATION NOTES**

- 1 Provide overload protection and disconnect as required.
- 2 **CAUTION Equipment Damage!**  
Actuators may be connected in parallel.  
Power consumption and input impedance must be observed.
- 3 Actuators may also be powered by 24 VDC.




- 4 For end position indication, interlock control, fan startup, etc., EFB24-S N4 and EFX24-S N4(H) incorporates two built-in auxiliary switches: 2 x SPDT, 3A (0.5A) @250 VAC, UL Approved, one switch is fixed at 10°, the other is fixed at 85°.

**APPLICATION NOTES**

- ◆ Meets cULus requirements without the need of an electrical ground connection.

**WARNING Live Electrical Components!**

During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

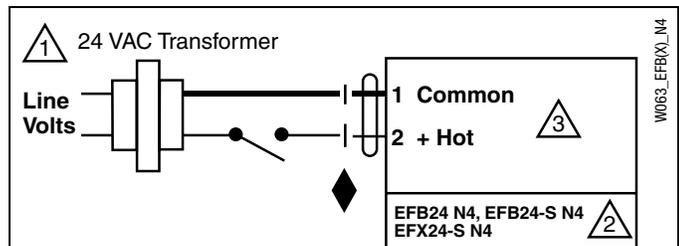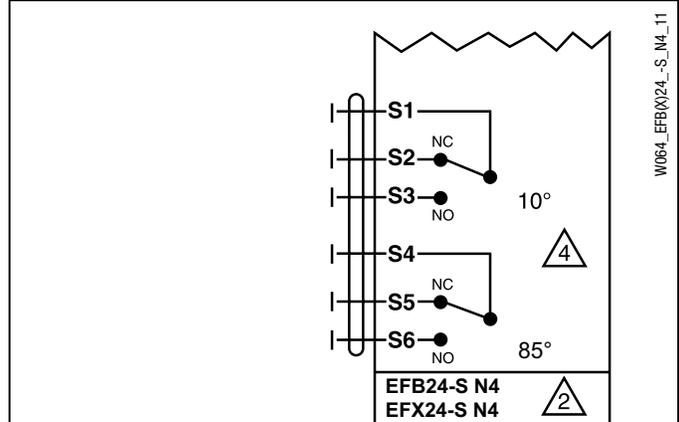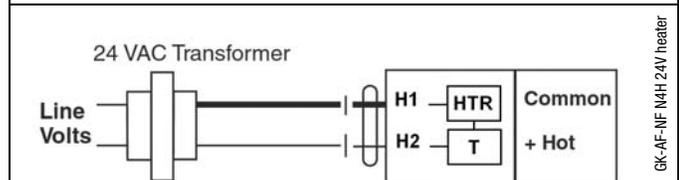
**On/Off wiring**

**Auxiliary Switches**

**NEMA 4 Heater**

# EFB120, EFB120-S, EFX120, EFX120-S

On/Off, Spring Return, 100 to 240 VAC



Technical Data		EFB120, EFB120-S, EFX120, EFX120-S
Power supply		100...240 VAC +10% / -20%, 50/60 Hz 100...125 VDC ±10%
Power consumption	running	9.5 W
	holding	4.5 W
VA rating		21 VA @ 100 VAC 29 VA @ 240 VAC
Electrical connection	EFB120...	3 ft, 18 GA appliance cable, 1/2" conduit connector <b>-S models:</b> Two 3 ft, 18 gauge appliance cables with 1/2" conduit connectors
	EFX120...	3 ft [1m], 10 ft [3m] or 16 ft [5m] 18 GA appliance cable, with or without 1/2" conduit connector <b>-S models:</b> Two 3 ft [1m], 10 ft [3m] or 16 ft [5m] appliance cables with or without 1/2" conduit connectors
Overload protection		electronic throughout 0 to 95° rotation
Control		on/off
Torque		270 in-lb [30 Nm] minimum
Direction of rotation	spring	reversible with CW/CCW mounting
Mechanical angle of rotation		max. 95° (adjustable with mechanical end stop, 35° to 95°)
Running time	motor	75 sec
	spring	< 20 seconds @ -4°F to 122°F [-20°C to 50°C]; < 60 seconds @ -22°F [-30°C]
Position indication		visual indicator, 0° to 95° (0° is full spring return position)
Manual override		5 mm hex crank (3/16" Allen), supplied
Humidity		max. 95% RH non-condensing
Ambient temperature		-22°F to 122°F [-30°C to 50°C]
Storage temperature		-40°F to 176°F [-40°C to 80°C]
Housing		Nema 2, IP54, Enclosure Type2
Housing material		aluminum diecast and plastic casing
Agency listings †		cULus acc. to UL60730-1A/-2-14, CAN/CSA E60730-1:02, CE acc. to 2004/108/EC & 2006/95/EC
Noise level		≤56.5dB(A) motor @ 75 seconds ≤71.4dB(A) spring return
Servicing		maintenance free
Quality standard		ISO 9001
Weight		9.82 lbs [4.45 kg], 10.14 lbs [4.6 kg] with switches

† Rated Impulse Voltage 2.5kV, Type of action 1.AA (1.AA.B for -S version), Control Pollution Degree 3.

## EFB120-S, EFX120-S

Auxiliary switches	2 x SPDT 3A (0.5A) @ 250 VAC, UL Approved one set at +10°, one adjustable 10° to 85°
--------------------	---

Torque min. 270 in-lb, for control of air dampers

## Application

For On/Off, fail-safe control of dampers in HVAC systems. Actuator sizing should be done in accordance with the damper manufacturer's specifications. Control is On/Off from an auxiliary contact, or a manual switch.

The actuator is mounted directly to a damper shaft up to 1.05" in diameter by means of its universal clamp. A crank arm and several mounting brackets are available for applications where the actuator cannot be direct coupled to the damper shaft.

## Operation

The EFB and EFX series actuators provide true spring return operation for reliable fail-safe application and positive close off on air tight dampers. The spring return system provides constant torque to the damper with, and without, power applied to the actuator.


The EFB and EFX series provides 95° of rotation and is provided with a graduated position indicator showing 0° to 95°.

The actuator may be stalled anywhere in its normal rotation without the need of mechanical end switches.

The EFB120-S and EFX120-S versions are provided with two built-in auxiliary switches. These SPDT switches provide safety interfacing or signaling, for example, for fan start-up. The switching function at the fail-safe position is fixed at +10°, the other switch function is adjustable between +10° to +85°. The EFB120, EFB120-S, EFX120 and EFX120-S actuator is shipped at +5° (5° from full fail-safe) to provide automatic compression against damper gaskets for tight shut-off.

**Installation Note:** Use flexible metal conduit. Push the UL listed conduit fitting device over the actuator's cable to butt against the enclosure. Screw in conduit connector. Jacket the actuators input wiring with UL listed flexible conduit. Properly terminate the conduit in a suitable junction box.

## Dimensions (Inches [mm])

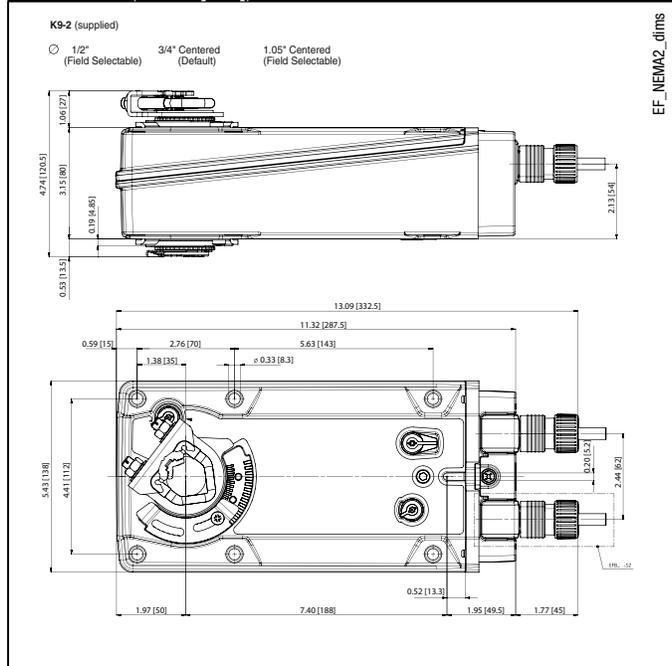

M40103 - 09/11 - Subject to change. © Belimo Aircontrols (USA), Inc.

**Accessories**

IND-EFB	Damper position indicator
KH-EFB	Crank arm
K9-2	Universal clamp for up to 1.05" diameter jackshafts
TF-CC US	Conduit fitting
Tool-07	13 mm wrench
ZG-EFB	Crank arm adaptor kit

**Note:** When using EFB120, EFB120-S, EFX120, EFX120-S actuators, only use accessories listed on this page.

For actuator wiring information and diagrams, refer to Belimo Wiring Guide.

**Typical Specification**

On/Off spring return damper actuators shall be direct coupled type which require no crank arm and linkage and be capable of direct mounting to a jackshaft up to a 1.05" diameter. The actuators must be designed so that they may be used for either clockwise or counterclockwise fail-safe operation. Actuators shall be protected from overload at all angles of rotation. If required, two SPDT auxiliary switch shall be provided having the capability of one being adjustable. Actuators with auxiliary switches must be constructed to meet the requirements for Double Insulation so an electrical ground is not required to meet agency listings. Actuators shall be cULus approved and have a 5 year warranty, and be manufactured under ISO 9001 International Quality Control Standards. Actuators shall be as manufactured by Belimo.

**Wiring Diagrams**
**INSTALLATION NOTES**



- 1 Provide overload protection and disconnect as required.
- 2 **CAUTION Equipment Damage!**  
Actuators may be connected in parallel.  
Power consumption and input impedance must be observed.
- 3 No ground connection is required.
- 4 For end position indication, interlock control, fan startup, etc., EFB120-S and EFX120-S incorporates two built-in auxiliary switches: 2 x SPDT, 3A (0.5A) @250 VAC, UL Approved, one switch is fixed at +10°, one is adjustable 10° to 85°.

**APPLICATION NOTES**

- ◆ Meets cULus requirements without the need of an electrical ground connection.

**WARNING Live Electrical Components!**

During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

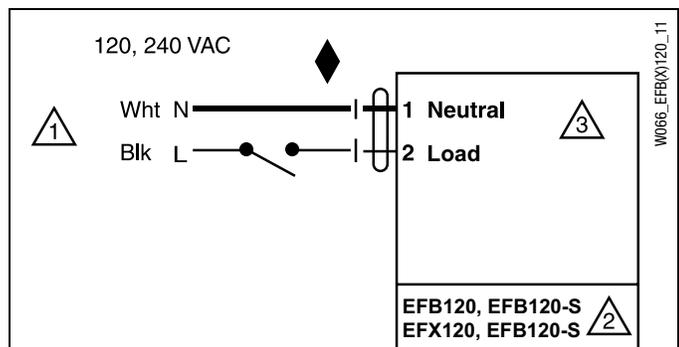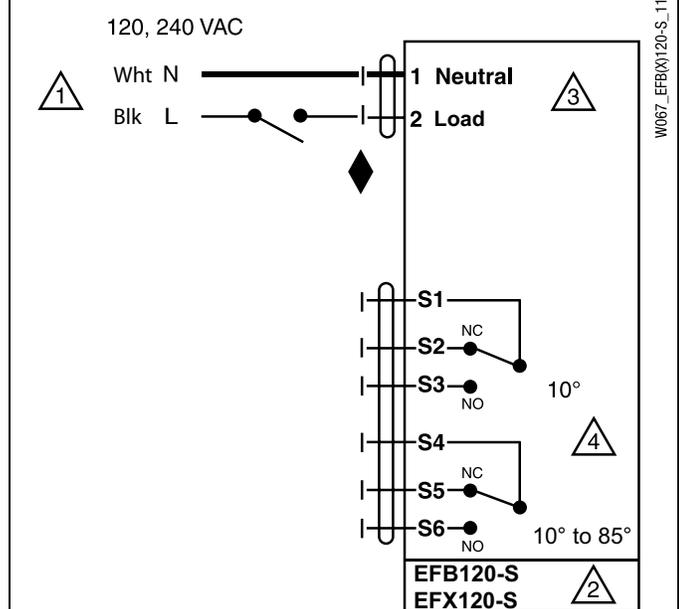
**On/Off wiring**

**Auxiliary Switches for EFB120-S, EFX120-S**

# EFB120-S N4, EFX120-S N4(H)

NEMA 4, On/Off, Spring Return, 100 to 240 VAC



Technical Data		EFB120-S N4, EFX120-S N4(H)
Power supply		100...240 VAC +10% / -20%, 50/60 Hz 100...125 VDC ±10%
Power consumption	running	9.5 W / heater 22 W
	holding	4.5 W
VA rating		21 VA @ 120 VAC / heater 22 VA 29 VA @ 240 VAC
Electrical connection		terminal block(s) inside junction box with knockouts
Overload protection		electronic throughout 0 to 95° rotation
Control		on/off
Torque		270 in-lb [30 Nm] minimum
Direction of rotation	spring	reversible with CW/CCW mounting
Mechanical angle of rotation		max. 95° (adjustable with mechanical end stop, 35° to 95°)
Running time	motor	75 sec
	spring	< 20 sec @ -4°F to 122°F [-20°C to 50°C]; < 60 sec @ -22°F [-30°C]
	spring (w/heater)	< 20 sec @ -22°F to 122°F [-30°C to 50°C]; < 60 sec @ -40°F [-40°C]
Position indication		visual indicator, 0° to 95° (0° is full spring return position)
Manual override		5 mm hex crank (3/16" Allen), supplied
Humidity		max. 95% RH non-condensing
Ambient temperature		-22°F to 122°F [-30°C to 50°C]
	with heater	-40°F to 122°F [-40°C to 50°C]
Storage temperature		-40°F to 176°F [-40°C to 80°C]
Housing		NEMA 4, IP66, Enclosure Type4
Housing material		aluminum diecast and plastic casing
Agency listings †		cULus acc. to UL60730-1A/-2-14, CAN/CSA E60730-1:02, CE acc. to 2004/108/EC & 2006/95/EC
Noise level		≤56.5dB(A) motor @ 75 seconds ≤71.4dB(A) spring return
Servicing		maintenance free
Quality standard		ISO 9001
Weight		10 lbs [4.54 kg], 10.1 lbs [4.59 kg] with heater
† Rated Impulse Voltage 2.5kV, Type of action 1.AA (1.AA.B for -S version), Control Pollution Degree 4. EFX120-S N4H is only UL listed.		
<b>EFB120-S N4, EFX120-S N4(H)</b>		
Auxiliary switches		2 x SPDT 3A (0.5A) @ 250 VAC, UL Approved one set at 10° and one set at 85°

**Torque min. 270 in-lb, for control of air dampers**

## Application

For on/off, fail-safe control of dampers in HVAC systems. Actuator sizing should be done in accordance with the damper manufacturer's specifications. Control is On/Off from an auxiliary contact, or a manual switch.

The actuator is mounted directly to a damper shaft up to 1.05" in diameter by means of its universal clamp. A crank arm and several mounting brackets are available for applications where the actuator cannot be direct coupled to the damper shaft.

## Operation

The EFB N4 and EFX N4 series actuators provide true spring return operation for reliable fail-safe application and positive close off on air tight dampers. The spring return system provides constant torque to the damper with, and without, power applied to the actuator.


The EFB N4 and EFX N4 series provides 95° of rotation and is provided with a graduated position indicator showing 0° to 95°.

The actuator may be stalled anywhere in its normal rotation without the need of mechanical end switches.

The EFB120-S N4 and EFX120-S N4(H) versions are provided with two built-in auxiliary switches. These SPDT switches provide safety interfacing or signaling, for example, for fan start-up. The switching function at the fail-safe position is fixed at +10°, the other switch function is fixed at 85°. The EFB120-S N4 and EFX120-S N4(H) actuator is shipped at +5° (5° from full fail-safe) to provide automatic compression against damper gaskets for tight shut-off.

**Installation Note:** Use 60°C/75°C copper (CU) conductor and wire size range 12-26 AWG, stranded or solid. If conduit is used, use flexible metal conduit; UL listed and CSA Certified Strain Relief or Conduit Fitting suitable for outdoor applications, rated NEMA type 4, 4X, 6 or 6X or watertight.

## Dimensions (Inches [mm])

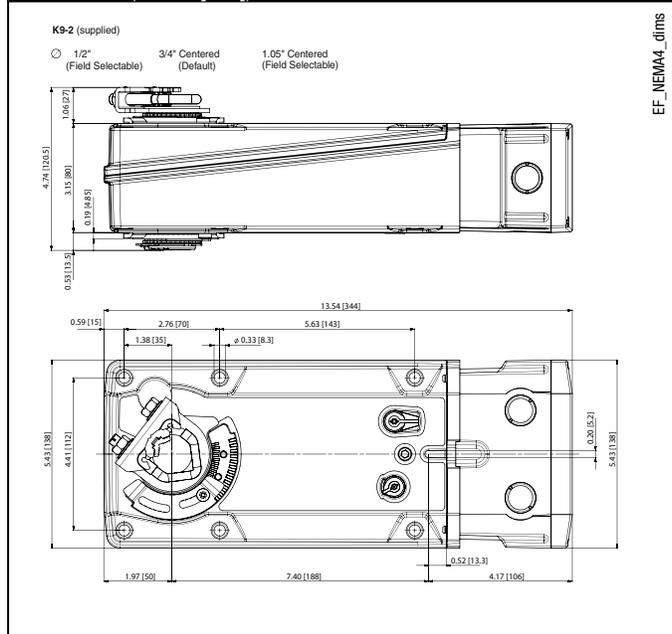

M40103 - 09/11 - Subject to change. © Belimo Aircontrols (USA), Inc.

**Accessories**

IND-EFB	Damper position indicator
KH-EFB	Crank arm
K9-2	Universal clamp for up to 1.05" diameter jackshafts
Tool-07	13 mm wrench
ZG-EFB	Crank arm adaptor kit

**Note:** When using EFB120-S N4, EFX120-S N4(H) actuators, only use accessories listed on this page.

For actuator wiring information and diagrams, refer to Belimo Wiring Guide.

**Typical Specification**

On/Off spring return damper actuators shall be direct coupled type which require no crank arm and linkage and be capable of direct mounting to a jackshaft up to a 1.05" diameter. The actuators must be designed so that they may be used for either clockwise or counterclockwise fail-safe operation. Actuators shall be protected from overload at all angles of rotation. If required, two SPDT auxiliary switch shall be provided. Actuators with auxiliary switches must be constructed to meet the requirements for Double Insulation so an electrical ground is not required to meet agency listings. Actuators shall be cULus approved and have a 5 year warranty, and be manufactured under ISO 9001 International Quality Control Standards. Actuators shall be as manufactured by Belimo.

**Wiring Diagrams**


**INSTALLATION NOTES**

- Provide overload protection and disconnect as required.
- CAUTION Equipment Damage!**  
Actuators may be connected in parallel.  
Power consumption and input impedance must be observed.
- No ground connection is required.
- For end position indication, interlock control, fan startup, etc., EFB120-S N4 and EFX120-S N4(H) incorporates two built-in auxiliary switches: 2 x SPDT, 3A (0.5A) @250 VAC, UL Approved, one switch is fixed at 10°, the other is fixed at 85°.


**APPLICATION NOTES**

- Meets cULus requirements without the need of an electrical ground connection.


**WARNING Live Electrical Components!**  
 During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

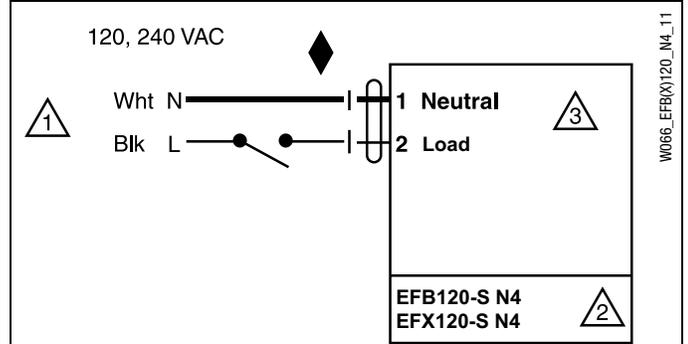

**On/Off wiring**

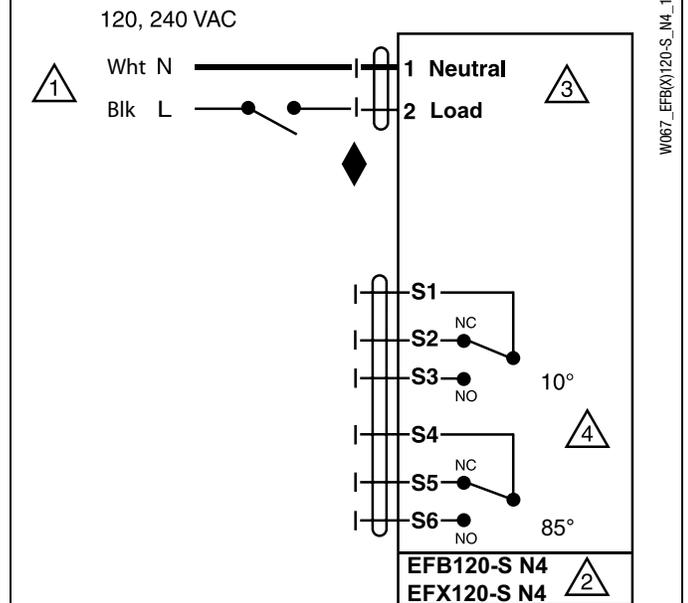

**Auxiliary Switches**

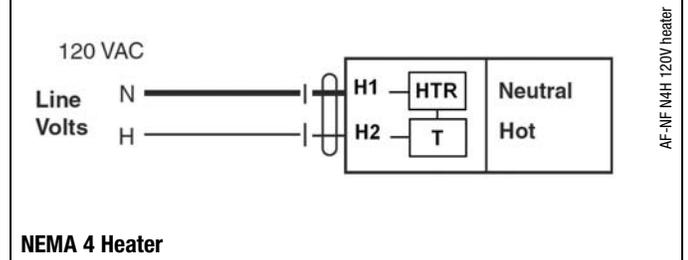

**NEMA 4 Heater**

M40103 - 09/11 - Subject to change. © Belimo Aircontrols (USA), Inc.

W066\_EFB(X)120\_N4\_11

W067\_EFB(X)120-S\_N4\_11

AF-NF-N4H 120V heater

# EFB24-SR, EFB24-SR-S, EFX24-SR, EFX24-SR-S

Proportional, Spring Return, 24 V, for 2 to 10 VDC or 4 to 20 mA Control Signal



Technical Data		EFB24-SR, EFB24-SR-S, EFX24-SR, EFX24-SR-S
Power supply		24 VAC ±20%, 50/60 Hz 24 VDC +20% / -10%
Power consumption	running	8 W
	holding	4.5 W
Transformer sizing		14 VA (class 2 power source)
Electrical connection		
	EFB...	3 ft, 18 GA appliance cable, 1/2" conduit connector <b>-S models:</b> two 3 ft, 18 gauge appliance cables with 1/2" conduit connectors
	EFX...	3 ft [1m], 10 ft [3m] or 16 ft [5m] 18 GA appliance or plenum cables, with or without 1/2" conduit connector <b>-S models:</b> Two 3 ft [1m], 10 ft [3m] or 16 ft [5m] appliance cables, with or without 1/2" conduit connectors
Overload protection		electronic throughout 0 to 95° rotation
Operating range Y		2 to 10 VDC, 4 to 20mA
Input impedance		100 kΩ for 2 to 10 VDC (0.1 mA) 500 Ω for 4 to 20 mA
Feedback output U		2 to 10 VDC (max. 0.5 mA)
Torque		270 in-lb [30 Nm] minimum
Direction of rotation	spring motor	reversible with CW/CCW mounting reversible with built-in switch
Mechanical angle of rotation		max. 95° (adjustable with mechanical end stop, 35° to 95°)
Running time	spring	< 20 seconds @ -4°F to 122°F [-20°C to 50°C]; < 60 seconds @ -22°F [-30°C]
	motor	95 seconds
Position indication		visual indicator, 0° to 95° (0° is full spring return position)
Manual override		5 mm hex crank (3/16" Allen), supplied
Humidity		max. 95% RH non-condensing
Ambient temperature		-22°F to 122°F [-30°C to 50°C]
Storage temperature		-40°F to 176°F [-40°C to 80°C]
Housing		Nema 2, IP54, Enclosure Type2
Housing material		aluminum diecast and plastic casing
Agency listings†		cULus acc. to UL60730-1A/-2-14, CAN/CSA E60730-1:02, CE acc. to 2004/108/EC & 2006/95/EC
Noise level		≤56.5dB(A) motor @ 95 seconds ≤71.4dB(A) spring return
Servicing		maintenance free
Quality standard		ISO 9001
Weight		9.82 lbs [4.45 kg], 10.14 lbs [4.6 kg] with switches
† Rated Impulse Voltage 800V, Type of action 1.AA (1.AA.B for -S version), Control Pollution Degree 3.		
<b>EFB24-SR-S, EFX24-SR-S</b>		
Auxiliary switches		2 x SPDT 3A (0.5A) @ 250 VAC, UL approved one set at +10°, one adjustable 10° to 85°

Torque min. 270 in-lb, for control of air dampers

## Application

For proportional modulation of dampers in HVAC systems. Actuator sizing should be done in accordance with the damper manufacturer's specifications.

The actuator is mounted directly to a damper shaft up to 1.05" in diameter by means of its universal clamp. A crank arm and several mounting brackets are available for applications where the actuator cannot be direct coupled to the damper shaft.

The actuator operates in response to a 2 to 10 VDC, or with the addition of a 500Ω resistor, a 4 to 20 mA control input from an electronic controller or positioner. A 2 to 10 VDC feedback signal is provided for position indication. Not to be used for a master-slave application.

## Operation

The EFB and EFX series actuators provide true spring return operation for reliable fail-safe application and positive close-off on air tight dampers. The spring return system provides constant torque to the damper with, and without, power applied to the actuator.


The EFB and EFX series provides 95° of rotation and is provided with a graduated position indicator showing 0° to 95°.

The EFB24-SR and EFX24-SR uses a brushless DC motor which is controlled by an Application Specific Integrated Circuit (ASIC) and a microprocessor. The microprocessor provides the intelligence to the ASIC to provide a constant rotation rate and to know the actuator's exact fail-safe position. The ASIC monitors and controls the brushless DC motor's rotation and provides a digital rotation sensing function to prevent damage to the actuator in a stall condition. The actuator may be stalled anywhere in its normal rotation without the need of mechanical end switches.

The EFB24-SR-S and EFX24-SR-S versions are provided with two built-in auxiliary switches. These SPDT switches provide safety interfacing or signaling, for example, for fan start-up. The switching function at the fail-safe position is fixed at +10°, the other switch function is adjustable between +10° to +85°. The EFB24-SR, EFB24-SR-S, EFX24-SR and EFX24-SR-S actuator is shipped at +5° (5° from full fail-safe) to provide automatic compression against damper gaskets for tight shut-off.

**Installation Note:** Use flexible metal conduit. Push the UL listed conduit fitting device over the actuator's cable to butt against the enclosure. Screw in conduit connector. Jacket the actuators input wiring with UL listed flexible conduit. Properly terminate the conduit in a suitable junction box.

## Dimensions (Inches [mm])

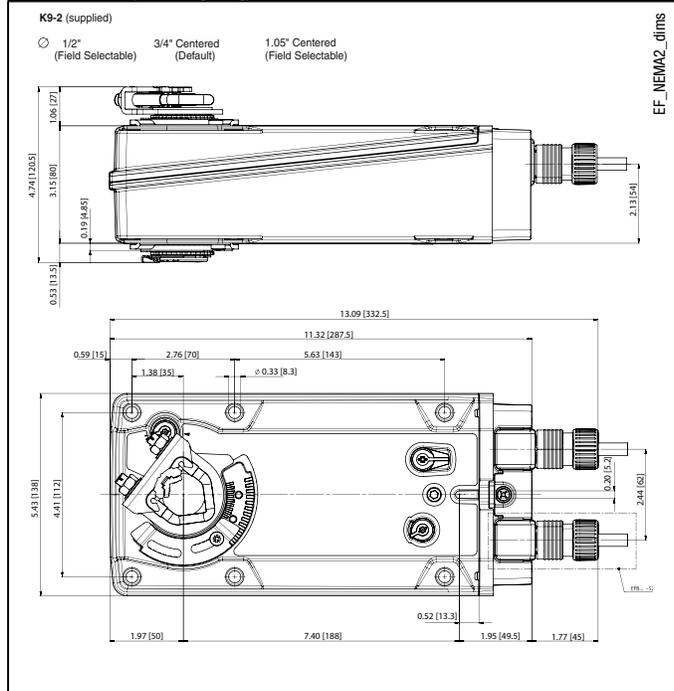

M40103 - 09/11 - Subject to change. © Belimo Aircontrols (USA), Inc.

### Accessories

IND-EFB	Damper position indicator
KH-EFB	Crank arm
K9-2	Universal clamp for up to 1.05" diameter jackshafts
TF-CC US	Conduit fitting
Tool-07	13 mm wrench
ZG-EFB	Crank arm adaptor kit

**NOTE:** When using EFB24-SR, EFB24-SR-S, EFX24-SR and EFX24-SR-S actuators, only use accessories listed on this page.

For actuator wiring information and diagrams, refer to Belimo Wiring Guide.

### Typical Specification

Spring return control damper actuators shall be direct coupled type which require no crank arm and linkage and be capable of direct mounting to a jackshaft up to a 1.05" diameter. The actuator must provide proportional damper control in response to a 2 to 10 VDC or, with the addition of a 500Ω resistor, a 4 to 20 mA control input from an electronic controller or positioner. The actuators must be designed so that they may be used for either clockwise or counterclockwise fail-safe operation. Actuators shall use a brushless DC motor controlled by a microprocessor and be protected from overload at all angles of rotation. Run time shall be constant, and independent of torque. A 2 to 10 VDC feedback signal shall be provided for position feedback. Actuators with auxiliary switches must be constructed to meet the requirements for Double Insulation so an electrical ground is not required to meet agency listings. Actuators shall be cULus Approved and have a 5 year warranty, and be manufactured under ISO 9001 International Quality Control Standards. Actuators shall be as manufactured by Belimo.

### Wiring Diagrams


#### INSTALLATION NOTES

- 1 Provide overload protection and disconnect as required.
- 2 **CAUTION Equipment Damage!**  
Actuators may be connected in parallel.  
Power consumption and input impedance must be observed.  
Up to 4 actuators may be connected in parallel if not mechanically mounted to the same shaft. With 4 actuators wired to one 500 Ω resistor. Power consumption must be observed.
- 3 Actuator may also be powered by 24 VDC.
- 4 For end position indication, interlock control, fan startup, etc., EFB24-SR-S and EFX24-SR-S incorporates two built-in auxiliary switches: 2 x SPDT, 3A (0.5A) @250 VAC, UL Approved, one switch is fixed at +10°, one is adjustable 10° to 85°.
- 5 Only connect common to neg. (-) leg of control circuits


#### APPLICATION NOTES

- ◆ The ZG-R01 500 Ω resistor converts the 4 to 20 mA control signal to 2 to 10 VDC.


**WARNING Live Electrical Components!**  
During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

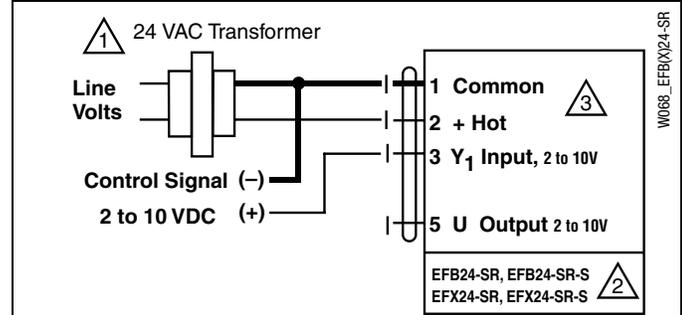

2 to 10 VDC control

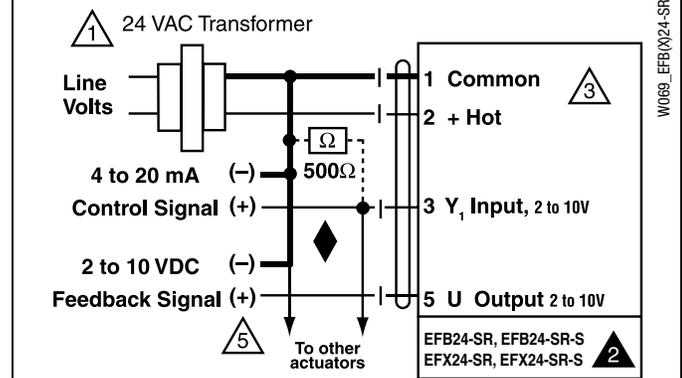

4 to 20 mA control with 2 to 10 VDC feedback output

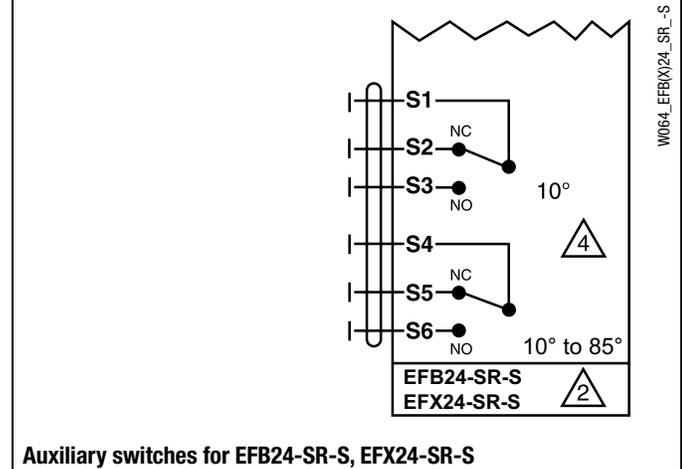

Auxiliary switches for EFB24-SR-S, EFX24-SR-S

# EFB24-SR N4, EFB24-SR-S N4, EFX24-SR-S N4(H)

NEMA 4, Proportional, Spring Return, 24 V, for 2 to 10 VDC or 4 to 20 mA Control Signal



Technical Data		EFB24-SR N4, EFB24-SR-S N4, EFX24-SR-S N4(H)
Power supply		24 VAC ±20%, 50/60 Hz 24 VDC +20% / -10%
Power consumption	running	8 W / heater 21 W
	holding	4.5 W
Transformer sizing		14 VA (class 2 power source) / heater 21 VA
Electrical connection		terminal block(s) inside junction box with knockouts
Overload protection		electronic throughout 0 to 95° rotation
Operating range Y		2 to 10 VDC, 4 to 20mA
Input impedance		100 kΩ for 2 to 10 VDC (0.1 mA) 500 Ω for 4 to 20 mA
Feedback output U		2 to 10 VDC (max. 0.5 mA)
Torque		270 in-lb [30 Nm] minimum
Direction of rotation	spring	reversible with CW/CCW mounting
	motor	reversible with built-in switch
Mechanical angle of rotation		max. 95° (adjustable with mechanical end stop, 35° to 95°)
Running time	spring	< 20 seconds @ -4°F to 122°F [-20°C to 50°C]; < 60 seconds @ -22°F [-30°C]
	motor	95 seconds
	spring (w/heater)	< 20 sec @ -22°F to 122°F [-30°C to 50°C]; < 60 sec @ -40°F [-40°C]
Position indication		visual indicator, 0° to 95° (0° is full spring return position)
Manual override		5 mm hex crank (3/16" Allen), supplied
Humidity		max. 95% RH non-condensing
Ambient temperature		-22°F to 122°F [-30°C to 50°C]
	with heater	-40°F to 122°F [-40°C to 50°C]
Storage temperature		-40°F to 176°F [-40°C to 80°C]
Housing		NEMA 4, IP66, Enclosure Type4
Housing material		aluminum diecast and plastic casing
Agency listings†		cULus acc. to UL60730-1A/-2-14, CAN/CSA E60730-1:02, CE acc. to 2004/108/EC & 2006/95/EC
Noise level		≤56.5dB(A) motor @ 95 seconds ≤71.4dB(A) spring return
Servicing		maintenance free
Quality standard		ISO 9001
Weight		10 lbs [4.54 kg], 10.1 lbs [4.59 kg] with heater
† Rated Impulse Voltage 800V, Type of action 1.AA (1.AA.B for -S version), Control Pollution Degree 4.		
<b>EFB24-SR-S N4, EFX24-SR-S N4(H)</b>		
Auxiliary switches		2 x SPDT 3A (0.5A) @ 250 VAC, UL approved one set at 10°, and one set at 85°

Torque min. 270 in-lb, for control of air dampers

## Application

For proportional modulation of dampers in HVAC systems. Actuator sizing should be done in accordance with the damper manufacturer's specifications.

The actuator is mounted directly to a damper shaft up to 1.05" in diameter by means of its universal clamp. A crank arm and several mounting brackets are available for applications where the actuator cannot be direct coupled to the damper shaft.

The actuator operates in response to a 2 to 10 VDC, or with the addition of a 500Ω resistor, a 4 to 20 mA control input from an electronic controller or positioner. A 2 to 10 VDC feedback signal is provided for position indication. Not to be used for a master-slave application.

## Operation

The EFB N4 and EFX N4 series actuators provide true spring return operation for reliable fail-safe application and positive close-off on air tight dampers. The spring return system provides constant torque to the damper with, and without, power applied to the actuator.


The EFB N4 and EFX N4 series provide 95° of rotation and is provided with a graduated position indicator showing 0° to 95°.

The EFB N4 and EFX N4 series use a brushless DC motor which is controlled by an Application Specific Integrated Circuit (ASIC) and a microprocessor. The microprocessor provides the intelligence to the ASIC to provide a constant rotation rate and to know the actuator's exact fail-safe position. The ASIC monitors and controls the brushless DC motor's rotation and provides a digital rotation sensing function to prevent damage to the actuator in a stall condition. The actuator may be stalled anywhere in its normal rotation without the need of mechanical end switches.

The EFB24-SR-S N4 and EFX24-SR-S N4(H) versions are provided with two built-in auxiliary switches. These SPDT switches provide safety interfacing or signaling, for example, for fan start-up. The switching function at the fail-safe position is fixed at +10°, the other switch function is fixed at 85°. The EFB24-SR N4, EFB24-SR-S N4, and EFX24-SR-S N4(H) actuator is shipped at +5° (5° from full fail-safe) to provide automatic compression against damper gaskets for tight shut-off.

**Installation Note:** Use 60°C/75°C copper (CU) conductor and wire size range 12-26 AWG, stranded or solid. If conduit is used, use flexible metal conduit; UL listed and CSA Certified Strain Relief or Conduit Fitting suitable for outdoor applications, rated NEMA type 4, 4X, 6 or 6X or watertight.

## Dimensions (Inches [mm])

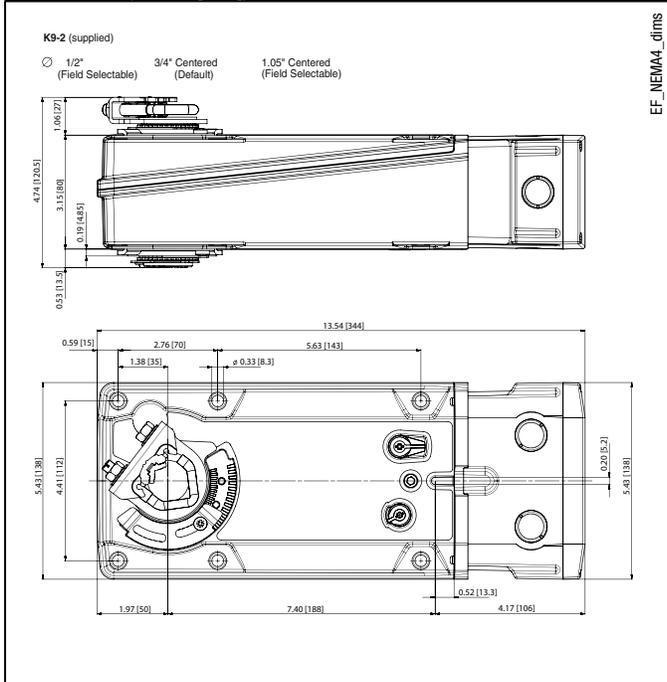

M40103 - 09/11 - Subject to change. © Belimo Aircontrols (USA), Inc.

**Accessories**

IND-EFB	Damper position indicator
KH-EFB	Crank arm
K9-2	Universal clamp for up to 1.05" diameter jackshafts
Tool-07	13 mm wrench
ZG-EFB	Crank arm adaptor kit

**NOTE:** When using EFB24-SR N4, EFB24-SR-S N4, and EFX24-SR-S N4(H) actuators, only use accessories listed on this page.  
 For actuator wiring information and diagrams, refer to Belimo Wiring Guide.

**Typical Specification**

Spring return control damper actuators shall be direct coupled type which require no crank arm and linkage and be capable of direct mounting to a jackshaft up to a 1.05" diameter. The actuator must provide proportional damper control in response to a 2 to 10 VDC or, with the addition of a 500Ω resistor, a 4 to 20 mA control input from an electronic controller or positioner. The actuators must be designed so that they may be used for either clockwise or counterclockwise fail-safe operation. Actuators shall use a brushless DC motor controlled by a microprocessor and be protected from overload at all angles of rotation. Run time shall be constant, and independent of torque. A 2 to 10 VDC feedback signal shall be provided for position feedback. Actuators with auxiliary switches must be constructed to meet the requirements for Double Insulation so an electrical ground is not required to meet agency listings. Actuators shall be cULus Approved and have a 5 year warranty, and be manufactured under ISO 9001 International Quality Control Standards. Actuators shall be as manufactured by Belimo.

**Wiring Diagrams**

**INSTALLATION NOTES**

- 1 Provide overload protection and disconnect as required.
- 2 **CAUTION Equipment Damage!**  
 Actuators may be connected in parallel.  
 Power consumption and input impedance must be observed.  
 Up to 4 actuators may be connected in parallel if not mechanically mounted to the same shaft. With 4 actuators wired to one 500 Ω resistor. Power consumption must be observed.
- 3 Actuator may also be powered by 24 VDC.
- 4 For end position indication, interlock control, fan startup, etc., EFB24-SR-S N4 and EFX24-SR-S N4 incorporates two built-in auxiliary switches: 2 x SPDT, 3A (0.5A) @250 VAC, UL Approved, one switch is fixed at +10°, the other is fixed at 85°.
- 5 Only connect common to neg. (-) leg of control circuits


**APPLICATION NOTES**

- ◆ The ZG-R01 500 Ω resistor converts the 4 to 20 mA control signal to 2 to 10 VDC.


**WARNING Live Electrical Components!**

During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.


M40103 - 09/11 - Subject to change. © Belimo Aircontrols (USA), Inc.

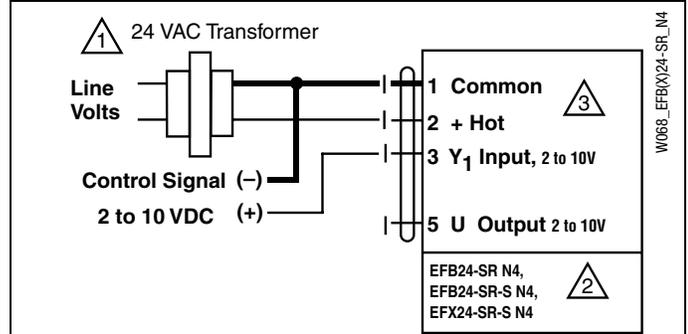


**2 to 10 VDC control**

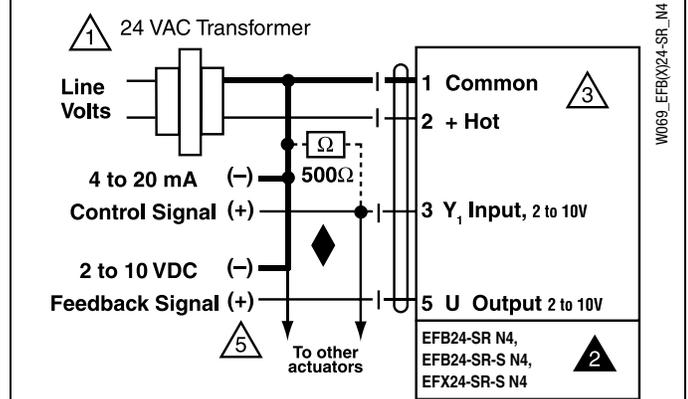

**4 to 20 mA control with 2 to 10 VDC feedback output**

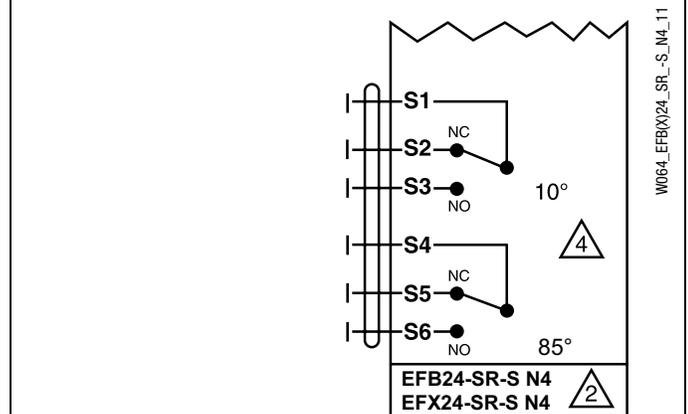

**Auxiliary switches**

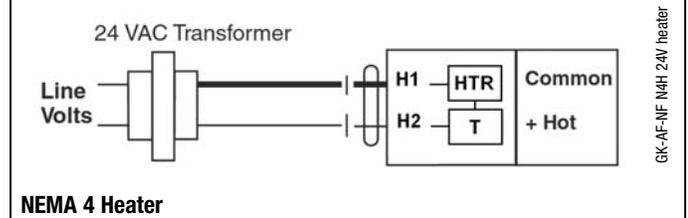

**NEMA 4 Heater**



**Accessories**

IND-EFB	Damper position indicator
KH-EFB	Crank arm
K9-2	Universal clamp for up to 1.05" diameter jackshafts
TF-CC US	Conduit fitting
Tool-07	13 mm wrench
ZG-EFB	Crank arm adaptor kit

**NOTE:** When using EFB24-MFT, EFB24-MFT-S, EFX24-MFT and EFX24-MFT-S actuators, only use accessories listed on this page.  
 For actuator wiring information and diagrams, refer to Belimo Wiring Guide.

**Typical Specification**

Spring return control damper actuators shall be direct coupled type which require no crank arm and linkage and be capable of direct mounting to a jackshaft up to a 1.05" diameter. The actuator must provide proportional damper control in response to a 2 to 10 VDC or, with the addition of a 500Ω resistor, a 4 to 20 mA control input from an electronic controller or positioner. The actuators must be designed so that they may be used for either clockwise or counterclockwise fail-safe operation. Actuators shall use a brushless DC motor controlled by a microprocessor and be protected from overload at all angles of rotation. Run time shall be constant, and independent of torque. A 2 to 10 VDC feedback signal shall be provided for position feedback. Actuators with auxiliary switches must be constructed to meet the requirements for Double Insulation so an electrical ground is not required to meet agency listings. Actuators shall be cULus Approved and have a 5 year warranty, and be manufactured under ISO 9001 International Quality Control Standards. Actuators shall be as manufactured by Belimo.

**Wiring Diagrams**

**INSTALLATION NOTES**

- 1 Provide overload protection and disconnect as required.
- 2 **CAUTION Equipment Damage!** Actuators may be connected in parallel if not mechanically mounted to the same shaft. Power consumption and input impedance must be observed.
- 3 Actuators may also be powered by 24 VDC.
- 4 Position feedback cannot be used with Triac sink controller. The actuator internal common reference is not compatible.
- 5 Control signal may be pulsed from either the Hot (source) or the Common (sink) 24 VAC line.
- 8 Contact closures A & B also can be triacs.
- 9 For triac sink the common connection from the actuator must be connected to the hot connection of the controller.


**APPLICATION NOTES**

- ◆ Meets UL requirements without the need of an electrical ground connection.
- ◆ The ZG-R01 500 Ω resistor may be used.


**WARNING Live Electrical Components!**

During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.


M40103 - 09/11 - Subject to change. © Belimo Aircontrols (USA), Inc.

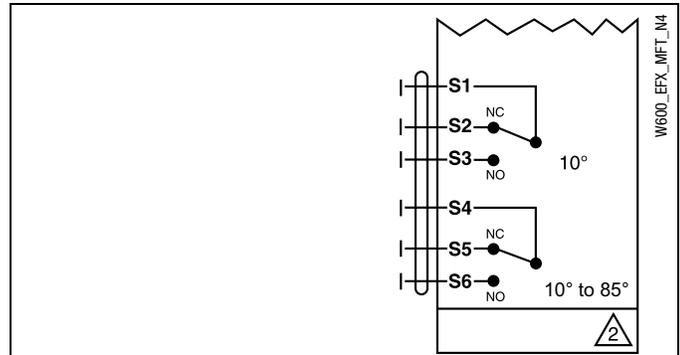


**Auxiliary Switches for EFB24-MFT-S, EFX24-MFT-S**

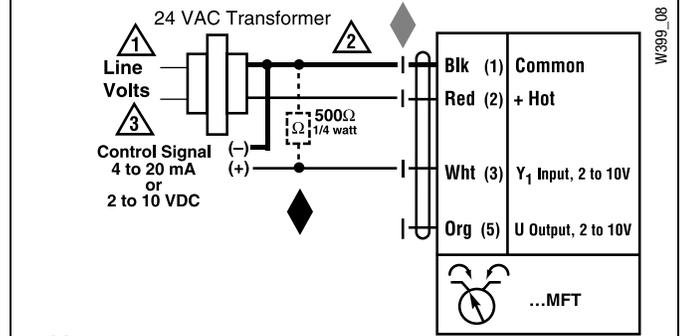


**VDC/4-20 mA**

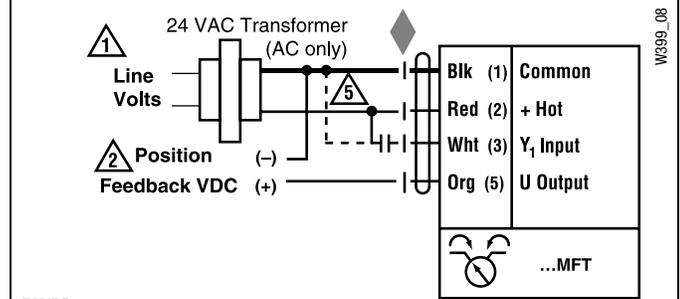

**PWM**

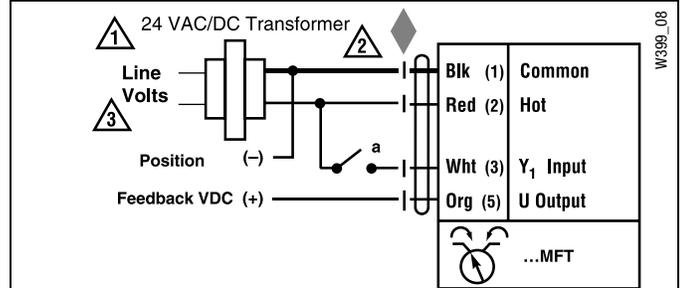

**On/Off control**

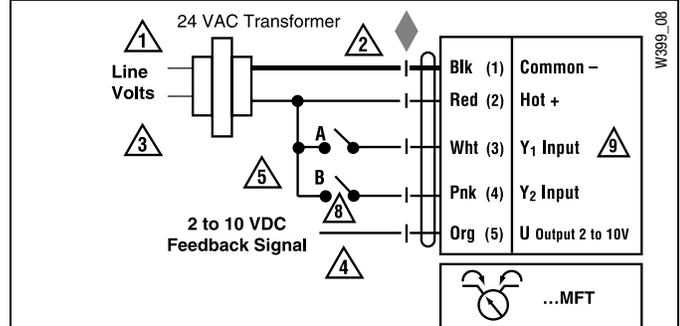

**Floating Point control**

# EFB24-MFT-S N4, EFX24-MFT-S N4(H)

NEMA 4, Proportional, Spring Return, Direct Coupled, 24V, Multi-Function Technology®



MFT



Technical Data	EFB24-MFT-S N4, EFX24-MFT-S N4(H)
Power supply	24 VAC, +/- 20%, 50/60 Hz 24 VDC, +20% / -10%
Power running consumption	9.5 W / heater 21 W
Power holding consumption	4.5 W
Transformer sizing	16 VA / heater 21 VA
Electrical connection	terminal block(s) inside junction box with knockouts
Overload protection	electronic throughout 0 to 95° rotation
Operating range Y*	2 to 10 VDC, 4 to 20 mA (default) variable (VDC, PWM, floating point, on/off)
Input impedance	100 kΩ for 2 to 10 VDC (0.1 mA) 500 Ω for 4 to 20 mA 1500 Ω for PWM, floating point and on/off control
Feedback output U*	2 to 10 VDC, 0.5 mA max (default)
Torque	270 in-lb [30 Nm] minimum
Direction of rotation	spring reversible with cw/ccw mounting motor reversible with built-in switch
Mechanical angle of rotation*	max. 95° (adjustable with mechanical end stop, 35° to 95°)
Running time	spring <20 sec @ -4°F to 122°F [-20° C to 50° C]; <60 sec @ -22°F [-30° C] motor* 150 seconds (default), variable (60 to 150 seconds) spring (w/heater) < 20 sec @ -22°F to 122°F [-30°C to 50°C]; < 60 sec @ -40°F [-40°C]
Angle of rotation adaptation	off (default)
Override control*	min position = 0% mid. position = 50% max. position = 100%
Position indication	visual indicator, 0° to 95° (0° is spring return position)
Manual override	5 mm hex crank (3/16" Allen), supplied
Humidity	max 95% RH, non-condensing
Ambient temperature	-22 to 122° F (-30 to 50° C)
with heater	-40°F to 122°F [-40°C to 50°C]
Storage temperature	-40 to 176° F (-40 to 80° C)
Housing	NEMA 4, IP66, Enclosure Type4
Housing material	aluminum diecast and plastic casing
Noise level	≤45.3dB(A) motor @ 150 seconds, run time dependent ≤71.4dB(A) spring return
Agency listings †	cULus acc. to UL60730-1A/-2-14, CAN/CSA E60730-1:02, CE acc. to 2004/108/EC & 2006/95/EC
Quality standard	ISO 9001
Servicing	maintenance free
Weight	10 lbs [4.54 kg], 10.1 lbs [4.59 kg] with heater

\* Variable when configured with MFT options

† Rated Impulse Voltage 800V, Type of action 1.AA (1.AA.B for -S version), Control Pollution Degree 4.

♦ Programmed for 60 sec motor run time. At 150 sec motor run time, transformer sizing is 12 VA and power consumption is 7 W running / 4.5 W holding.

## EFB24-MFT-S N4, EFX24-MFT-S N4(H)

Auxiliary switches	2 x SPDT 3A (0.5A) @ 250 VAC, UL approved one set at 10°, and one set at 85°
--------------------	---

- Torque min. 270 in-lb for control of air dampers
- Control 2 to 10 VDC (Default)
- Feedback 2 to 10 VDC (Default)

## Application

For proportional modulation of dampers in HVAC systems. The EFB24-MFT-S N4, EFX24-MFT-S N4(H) provides mechanical spring return operation for reliable fail-safe application.

## Default/Configuration

Default parameters for 2 to 10 VDC applications of the EFB24-MFT-S N4, EFX24-MFT-S N4(H) actuator are assigned during manufacturing. If required, custom versions of the actuator can be ordered. The parameters noted in the Technical Data table are variable.

These parameters can be changed by three means:

- Pre-set or custom configurations from Belimo
- Configurations set by the customer using the MFT PC tool (version 3.4 or higher) software application.
- Handheld ZTH-GEN

## Operation


The EFB24-MFT-S N4, EFX24-MFT-S N4(H) actuator provides 95° of rotation and is provided with a graduated position indicator showing 0° to 95°. The actuator will synchronize the 0° mechanical stop or the physical damper mechanical stop and use this point for its zero position during normal control operations. A unique manual override allows the setting of any actuator position within its 95° of rotation with no power applied. This mechanism can be released physically by the use of a crank supplied with the actuator. When power is applied the manual override is released and the actuator drives toward the fail-safe position.

The actuator uses a brushless DC motor which is controlled by an Application Specific Integrated Circuit (ASIC) and a microprocessor. The microprocessor provides the intelligence to the ASIC to provide a constant rotation rate and to know the actuator's exact position. The ASIC monitors and controls the brushless DC motor's rotation and provides a Digital Rotation Sensing (DRS) function to prevent damage to the actuator in a stall condition. The position feedback signal is generated without the need for mechanical feedback potentiometers using DRS. The actuator may be stalled anywhere in its normal rotation without the need of mechanical end switches.

The EFB24-MFT-S N4, EFX24-MFT-S N4(H) is mounted directly to control shafts up to 1.05" diameter by means of its universal clamp and anti-rotation bracket. A crank arm and several mounting brackets are available for damper applications where the actuator cannot be direct coupled to the damper shaft. The spring return system provides minimum specified torque to the application during a power interruption. The EFB24-MFT-S N4, EFX24-MFT-S N4(H) actuator is shipped at +5° (5° from full fail-safe) to provide automatic compression against damper gaskets for tight shut-off.

**NOTE: Please see documentation on Multi-Function Technology.**

**Installation Note:** Use 60°C/75°C copper (CU) conductor and wire size range 12-26 AWG, stranded or solid. If conduit is used, use flexible metal conduit; UL listed and CSA Certified Strain Relief or Conduit Fitting suitable for outdoor applications, rated NEMA type 4, 4X, 6 or 6X or watertight.

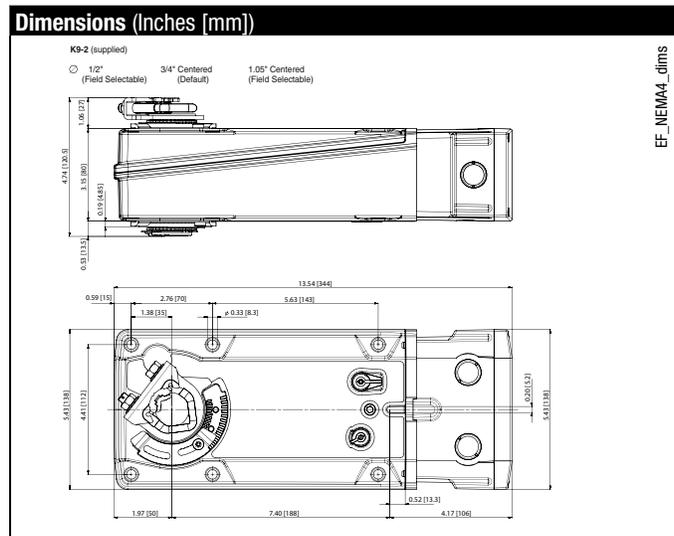

M40103 - 09/11 - Subject to change. © Belimo Aircontrols (USA), Inc.

### Accessories

IND-EFB	Damper position indicator
KH-EFB	Crank arm
K9-2	Universal clamp for up to 1.05" diameter jackshafts
Tool-07	13 mm wrench
ZG-EFB	Crank arm adaptor kit

**NOTE:** When using EFB24-MFT-S N4, and EFX24-MFT-S N4(H) actuators, only use accessories listed on this page.

For actuator wiring information and diagrams, refer to Belimo Wiring Guide.

### Typical Specification

Spring return control damper actuators shall be direct coupled type which require no crank arm and linkage and be capable of direct mounting to a jackshaft up to a 1.05" diameter. The actuator must provide proportional damper control in response to a 2 to 10 VDC or, with the addition of a 500Ω resistor, a 4 to 20 mA control input from an electronic controller or positioner. The actuators must be designed so that they may be used for either clockwise or counterclockwise fail-safe operation. Actuators shall use a brushless DC motor controlled by a microprocessor and be protected from overload at all angles of rotation. Run time shall be constant, and independent of torque. A 2 to 10 VDC feedback signal shall be provided for position feedback. Actuators with auxiliary switches must be constructed to meet the requirements for Double Insulation so an electrical ground is not required to meet agency listings. Actuators shall be cULus Approved and have a 5 year warranty, and be manufactured under ISO 9001 International Quality Control Standards. Actuators shall be as manufactured by Belimo.

### Wiring Diagrams

#### INSTALLATION NOTES



- 1 Provide overload protection and disconnect as required.
- 2 **CAUTION Equipment Damage!** Actuators may be connected in parallel if not mechanically mounted to the same shaft. Power consumption and input impedance must be observed.
- 3 Actuators may also be powered by 24 VDC.
- 4 Position feedback cannot be used with Triac sink controller. The actuator internal common reference is not compatible.
- 5 Control signal may be pulsed from either the Hot (source) or the Common (sink) 24 VAC line.
- 8 Contact closures A & B also can be triacs.
- 9 For triac sink the common connection from the actuator must be connected to the hot connection of the controller.

#### APPLICATION NOTES





- ◆ Meets UL requirements without the need of an electrical ground connection.
- ◆ The ZG-R01 500 Ω resistor may be used.

#### WARNING Live Electrical Components!

During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

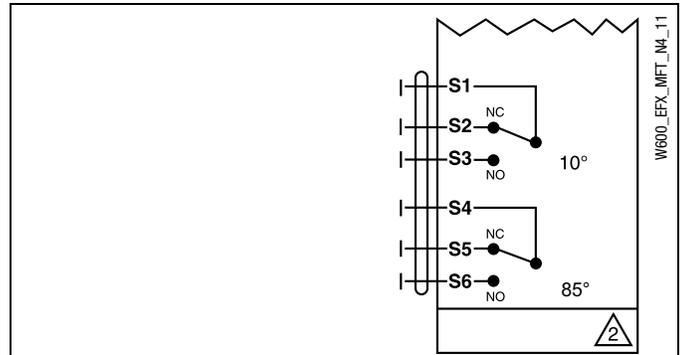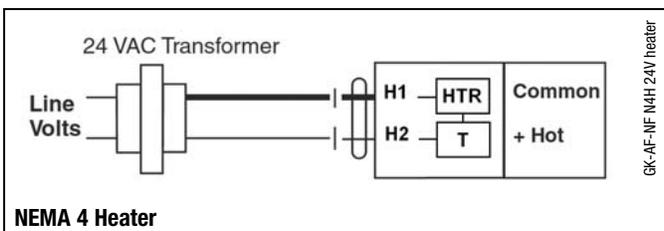

#### Auxiliary Switches for EFB24-MFT-S N4, EFX24-MFT-S N4

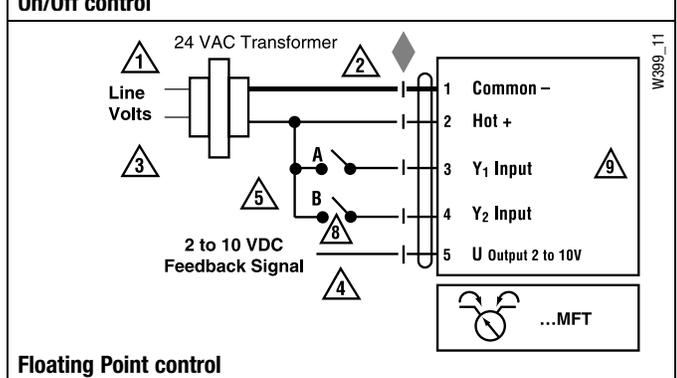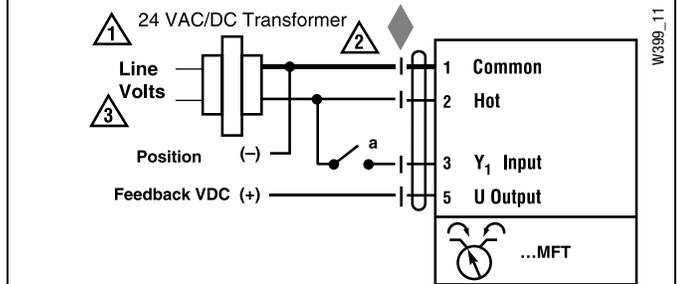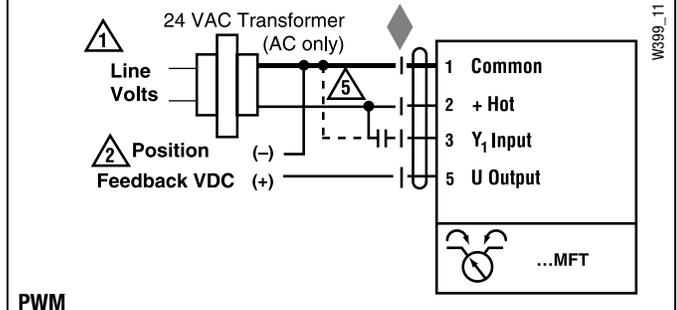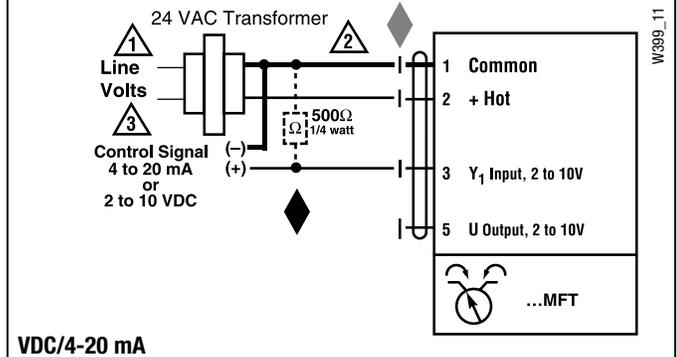


M40103 - 09/11 - Subject to change. © Belimo Aircontrols (USA), Inc.




### Quick-Mount Visual Instructions

1. Rotate the damper to its fail-safe position.  
If the shaft rotates counterclockwise, mount the "CCW" side of the actuator out.  
If it rotates clockwise, mount the actuator with the "CW" side out.
  2. If the universal clamp is not on the correct side of the actuator, mount it onto the correct side.
  3. Slide the actuator onto the shaft and tighten the nuts on the V-bolt with a 13mm wrench to 11 ft-lb of torque.
  4. Slide the anti-rotation strap under the actuator so that it engages the slot at the base of the actuator. Secure the strap to the duct work with #8 self-tapping screws.
- NOTE: Read the "Standard Mounting" instructions, on the next page, for more detailed information.

### Dimensions (Inches [mm])

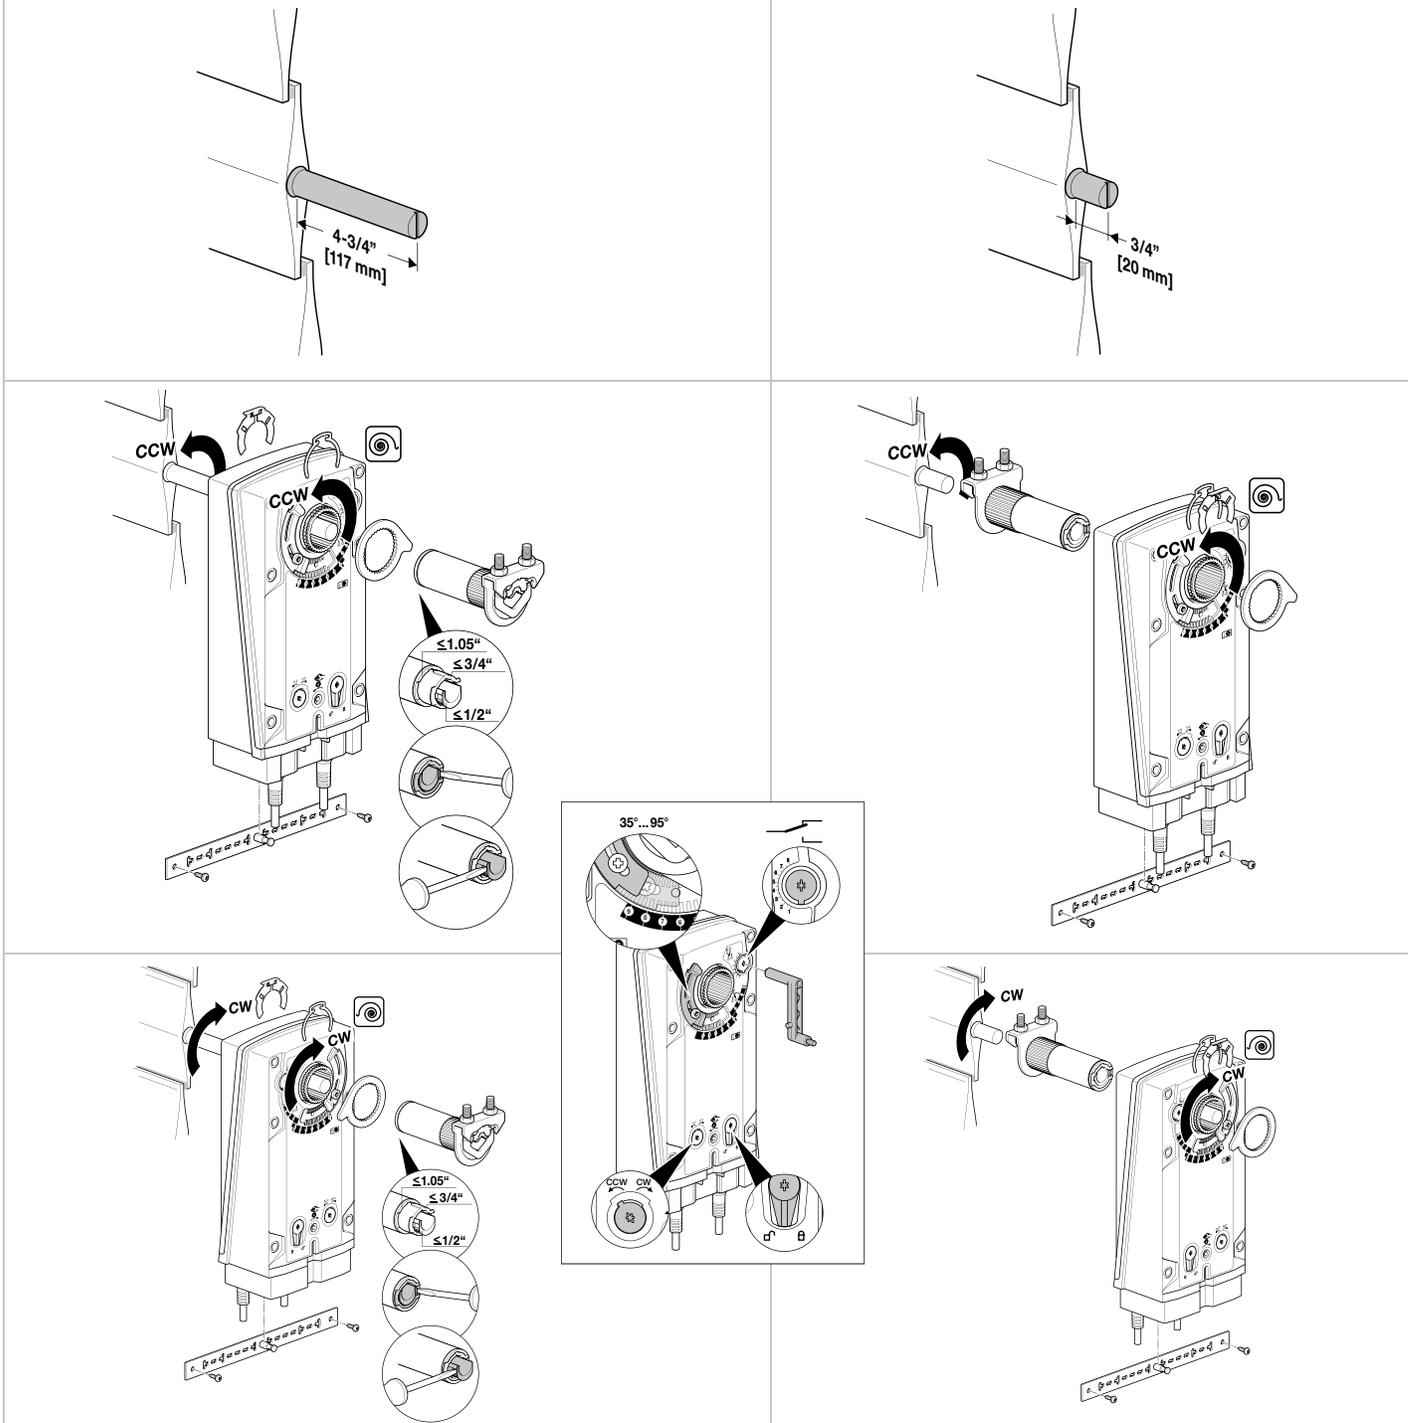

M40103 - 09/11 - Subject to change. © Belimo Aircontrols (USA), Inc.

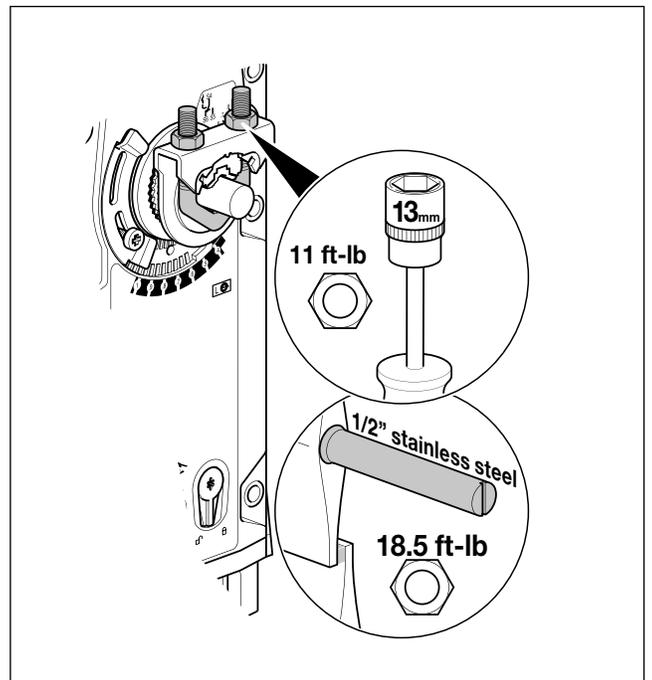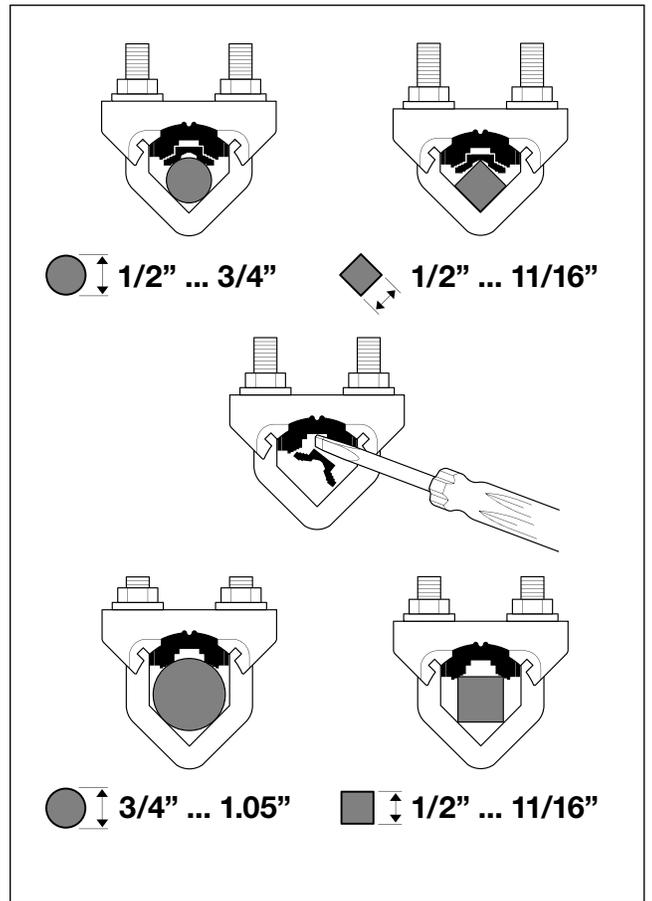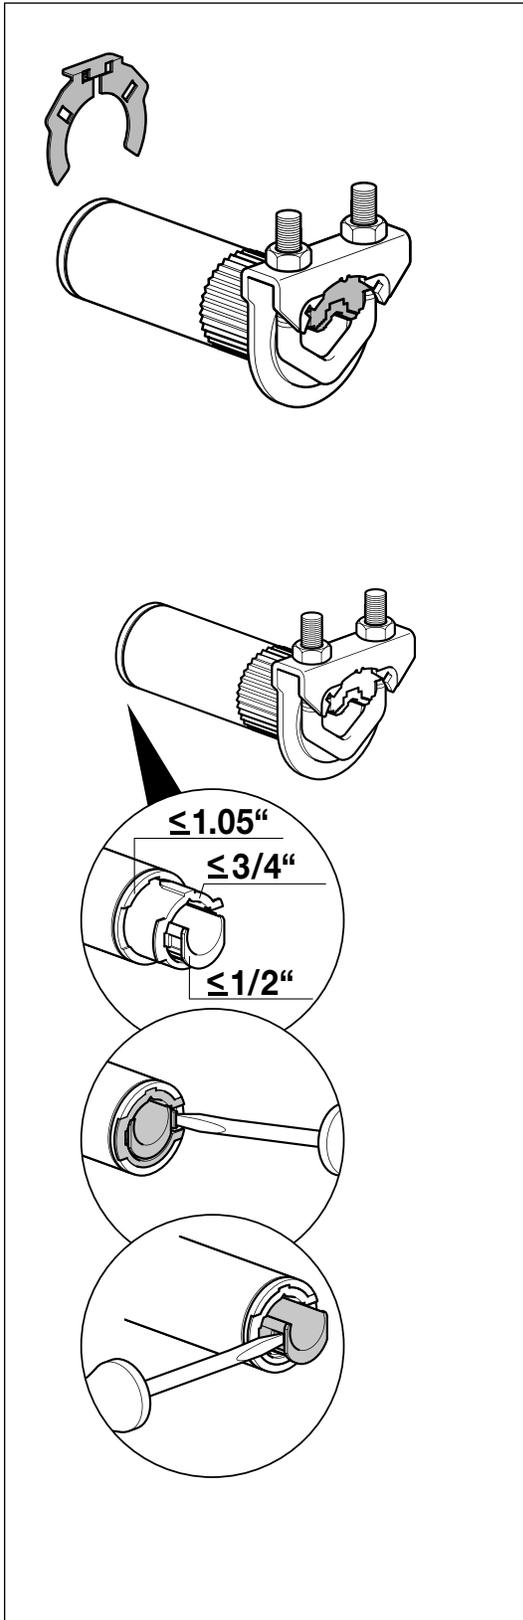

M40103 - 09/11 - Subject to change. © Belimo Aircontrols (USA), Inc.

# Installation Instructions

## Mechanical Installation




### Determining Torque Loading and Actuator Sizing

Damper torque loadings, used in selecting the correct size actuator, should be provided by the damper manufacturer. If this information is not available, the following general selection guidelines can be used.

Damper Type	Torque Loading
Opposed blade, without edge seals, for non-tight close-off applications	3 in-lb/sq. ft.
Parallel blade, without edge seals, for non-tight close-off applications	4 in-lb/sq. ft.
Opposed blade, with edge seals, for tight close-off applications	5 in-lb/sq. ft.
Parallel blade, with edge seals, for tight close-off applications	7 in-lb/sq. ft.

The above torque loadings will work for most applications with 1000 FPM face velocity. For applications between this criteria and 2500 FPM, the torque loading should be increased by a multiplier of 1.5. If the application calls for higher criteria up to 3000 FPM, use a multiplier of 2.0.

### Torque Loading Chart

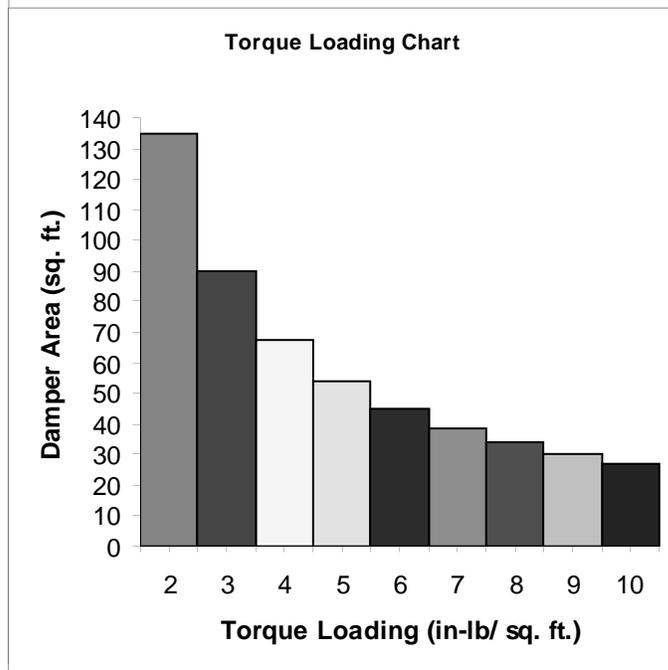

### General Information

Belimo actuators should be mounted indoors in a dry, relatively clean environment free from corrosive fumes. If the actuator is to be mounted outdoors, a protective enclosure must be used to shield the actuator.

For new construction work, **order dampers with extended shafts**. Instruct the installing contractor to allow space for mounting and service of the Belimo actuator on the shaft. The damper shaft must extend at least 4-3/4" from the duct. If the shaft extends less than 4-3/4" or if an obstruction blocks access, the shaft can be extended with the AV 8-25 shaft extension accessory or the actuator may be mounted in its short shaft configuration.

### Mechanical Operation


The actuator is mounted directly to a damper shaft up to 1.05" in diameter by means of its universal clamp. A crank arm and several mounting brackets are available for applications where the actuator cannot be direct coupled to the damper shaft. The EFB, EFX series actuators provide true spring return operation for reliable fail-safe application and positive close-off on air tight dampers. The spring return system provides constant torque to the damper with, and without, power applied to the actuator. The EFB...-S, EFX...-S versions are provided with two built-in auxiliary switches. These SPDT switches are provided for safety interfacing or signaling, for example, for fan start-up. The switching function at the fail-safe position is fixed at +10°, the other switch function is adjustable between +10° to +85° (for NEMA 4 versions, the second switch is fixed at +85°.)

### Automatic Airtight Dampers/Manual Override

The EFB, EFX series provides 95° of rotation and is provided with a graduated position indicator showing 0° to 95°.

The EFB, EFX has a unique built in manual positioning mechanism which allows the setting of any damper position within its 95° of rotation. A pre-tensioned spring automatically tightens the damper when power is applied to the actuator, compensating for damper seal deterioration..

The actuator is shipped at +5° (5° from full fail-safe) to provide automatic compression against damper gaskets for tight shut-off. When power is applied, the manual mechanism is released and the actuator drives toward the full fail-safe position.

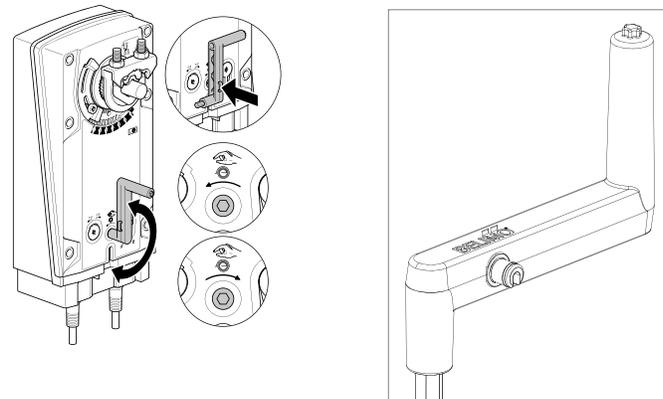

### Standard Mounting

**NOTE:** The EFB, EFX...series actuator is shipped with the manual override adjusted for a +5° position at the universal clamp (not at full fail-safe, 0°). This allows for automatic compression of damper blade seals when the actuator is in use, providing tight shut-off. This assumes that the damper is to have tight shut-off at the fail-safe position. If tight close-off is desired at the opposite direction from fail-safe, the manual override should be released so the actuator can go to the full fail-safe position. See the manual override instructions.

1. Manually move the damper to the fail-safe position (usually closed). If the shaft rotated counterclockwise (↺), this is a CCW installation. If the shaft rotated clockwise (↻), this is a CW installation. In a CCW installation, the actuator side marked "CCW" faces out, while in a CW installation, the side marked "CW" faces out. All other steps are identical.
2. The actuator is usually shipped with the universal clamp mounted to the "CCW" side of the actuator. To test for adequate shaft length, slide the actuator over the shaft with the side marked "CCW" (or the "CW" side if this is the side with the clamp). If the shaft extends at least 1/8" through the clamp, mount the actuator as follows. If not, go to the *Short Shaft Installation* section.
3. If the clamp is not on the correct side as determined in step #1, re-mount the clamp as follows. If it is on the correct side, proceed to step #5. Look at the universal clamp. If you are mounting the actuator with the "CCW" side out,

M40103 - 09/11 - Subject to change. © Belimo Aircontrols (USA), Inc.

position the clamp so that the pointer section of the tab is pointing to 0° (see Figure C) and the spline pattern of the clamp mates with spline of the actuator. Slip the clamp over the spline. (Use the same procedure if the “CW” side is out.) If your application requires a mechanical minimum position, read the *Rotation Limiting, Mechanical Minimum Damper Position* section.

4. Lock the clamp to the actuator using the retaining clip.
5. Verify that the damper is still in its full fail-safe position.
6. Slide the actuator over the shaft.
7. Position the actuator in the desired location.
8. Tighten the two nuts on the clamp using a 13mm wrench or socket using 11 ft-lb of torque.
9. Slip the stud of the anti rotation strap into the slot at the base of the actuator. The stud should be positioned approximately 1/16 of an inch from the closed end of the slot. Bend the strap as needed to reach the duct. Attach the strap to the duct with #8 self tapping screws.

### Short Shaft Installation

If the shaft extends at least 3/4” from the duct, follow these steps:

1. Determine the best orientation for the universal clamp on the back of the actuator. The best location would be where you have the easiest access to the V bolt nuts on the clamp.
2. Engage the clamp to the actuator as close as possible to the determined location.
3. Lock the clamp in place using the remaining retainer clip.
4. Verify that the damper is still in its full fail-safe position.
5. Slide the actuator over the shaft.
6. Position the actuator in the desired location.
7. Tighten the two nuts on the clamp using a 13mm wrench or socket using 11 ft-lb of torque.
8. Slip the stud of the anti-rotation strap into the slot at the base of the actuator. The stud should be positioned approximately 1/16 of an inch from the closed end of the slot. Bend the strap as needed to reach the duct. Attach the strap to the duct with #8 self tapping screws.
9. If damper position indication is required, use the optional IND-EFB pointer. See **Figure A**.

### Jackshaft Installation

The EFB, EFX... series actuator is designed for use with jackshafts up to 1.05” in diameter. In most applications, the EFB, EFX actuator may be mounted in the same manner as a standard damper shaft application. If more torque is required than one EFB, EFX actuator can provide, a second EFB, EFX actuator may be mounted to the jackshaft. *See wiring guide for wiring details.*

#### EF ACTUATORS WHICH MAY BE USED ON ONE SHAFT

Model	Maximum Quantity Per Shaft	Minimum Shaft Diameter
EFB24(-S)(N4) EFX24(-S)(N4) EFB120(-S)(N4) EFX120(-S)(N4)	2*	3/4”
EFB24-MFT(-S)(N4) EFX24-MFT(-S)(N4)	3**	3/4” for 2x 1” for 3x

\* Wired in parallel

\*\* Wired master-slave

**MOUNTING:** If the actuators are mounted on the opposed ends of the shaft, the actuator direction must be selected carefully. Usually, the direction of rotation is reversed.

### Multiple Actuator Mounting

If more torque is required than one EFB, EFX actuator can provide, a second EFB, EFX actuator may be mounted to the shaft.

**NOTE:** The manual positioning mechanism cannot be used in multiple actuator applications.

**Special Wiring and Additional Information:** See wiring guide

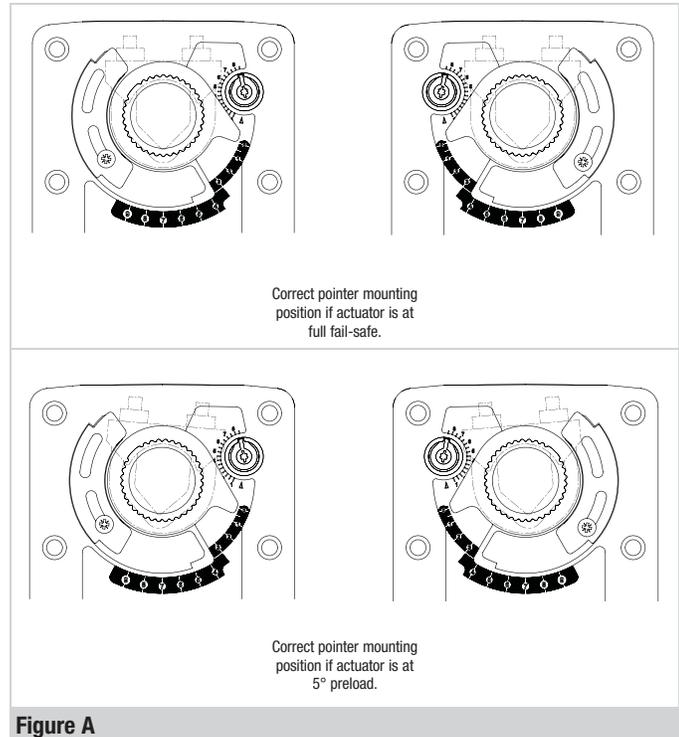


Figure A

### Rotation Limitation

The angle of rotation limiter, which is built into the actuator, is used in conjunction with the tab on the universal clamp or IND-EFB position indicator. In order to function properly, the clamp or indicator must be mounted correctly.


See **Figure A**.

The rotation limiter may not work in certain mounting orientations using the ZG-EFB mounting kit. Limiting the damper rotation must be accomplished by adjusting the crank arm linkage.

The built-in rotation limiter may be used in 2 ways to control the rotational output of the EFB, EFX series actuator. One use is in the application where a damper has a designed rotation less than 90°. An example would be a 45° or 60° rotating damper. The other application would be to set a minimum damper position which can be easily set or changed without having to remove the actuator from the damper.

### Damper Rotation Limiting

1. Determine the amount of damper rotation required.
2. Locate the Angle of Rotation Limiter on the actuator **Figure B**.
3. Position the limiter to the desired position, making sure the locating “teeth” on the limiter are engaged into the locating holes on the actuator.
4. Fasten the limiter by screwing the attached screw.
5. Test the damper rotation either manually with the manual crank or apply power and if required, a control signal. Re-adjust if necessary.

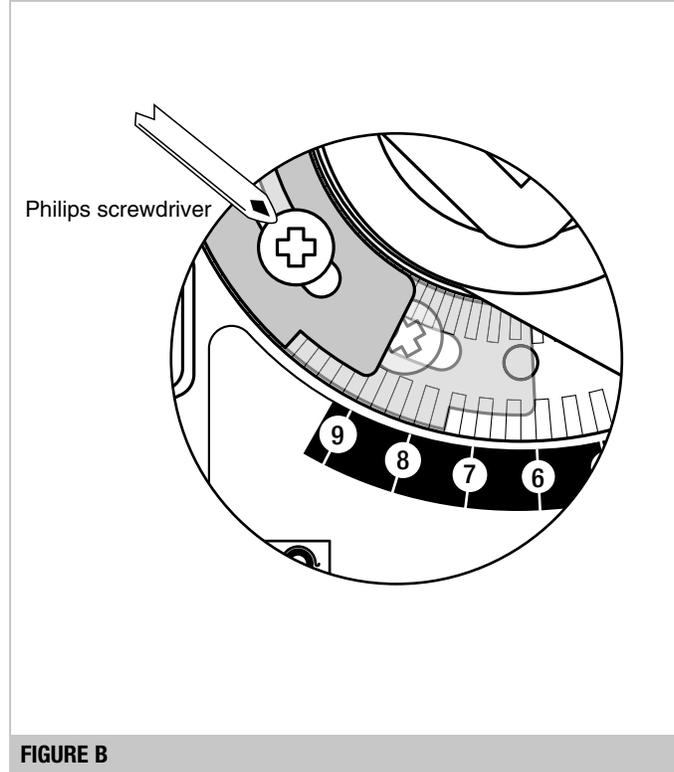


**FIGURE B**

### Manual Override

The EFB, EFX series actuators can be manually positioned to ease installation or for emergency positioning.

1. The manual override will only work if no power is available to the actuator.
2. Insert the manual crank (shipped with the actuator) into the hexagon hole located on either side of the actuator. An illustration, located on the label, shows the location.
3. Turn the crank in the direction shown on the label (clockwise on the "CW" side, counterclockwise on the "CCW" side). It will take approximately 34 revolutions to rotate the full 95° of rotation.
4. To lock the actuator in the required position, flip the switch to the locked position that is located to the right of the crank on the CCW side of the actuator (left of the crank on the CW side).
5. The manual override may be disengaged in 2 ways.
  - Flip the switch to the unlocked position and the actuator will go to its fail-safe position.
  - Apply power to wire 1 and 2. The actuator will automatically disengage the override function and will go to the "on" position in the case of the On/Off versions. Or, in the case of the proportional versions, go to the 0 signal position and then go to the position corresponding to the control signal. The actuator will now work normally.

#### CCW Side Example:

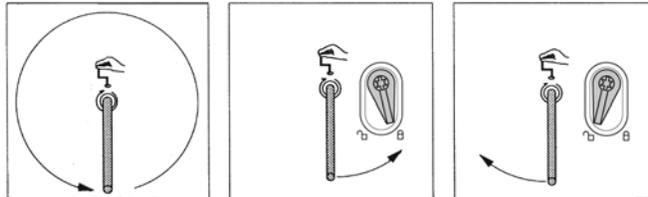

#### Winding the damper actuator

- insert crank handle
- turn handle in direction of arrow

#### Locking the damper actuator

- Flip the lock switch to the position pointing to the "locked" symbol

#### Unlocking the damper actuator (2 options)

- Flip the lock switch to the position pointing to the "unlocked" symbol.
- Remote control by supplying power to the unit for > than 3 sec.

### Testing the installation Without Power

The actuator/damper installation may be tested without power at the actuator. Refer to the manual positioning section of the instructions. Move the damper to its full non-fail-safe position using the manual crank. Disengage the manual position mechanism and have the damper go to full fail-safe position. Correct any mechanical problems and retest.

### Auxiliary Switches

The EFB, EFX series actuators may be ordered with two built-in SPDT auxiliary switches used for safety interfacing or signaling, for example, for fan start-up. The switch position near the fail-safe position is fixed at 10°. The other is adjustable between 10° and 85° of rotation (for NEMA 4 versions, the second switch is fixed at +85°.) The crank that is supplied with the actuator is used to change the switch position.

#### SWITCH RATING

Voltage	Resistive Load	Inductive Load
120 VAC	3A	1.03A
250 VAC	3A	0.5A


Two methods may be used to adjust the switching point of the adjustable switch.

#### Method 1 - See Figure F


1. The actuator must be in its fail-safe position.
2. Insert the crank handle into the torx shaped hole located in the center of the adjustable switch pointer.
3. Gently rotate the crank until the switch pointer is at the desired switch point in degrees as shown.

#### EFB, EFX... Series

##### Factory setting 85°

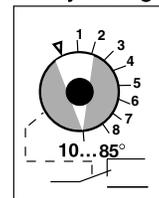

##### Rotate with crank handle

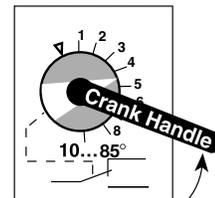

##### 60° set

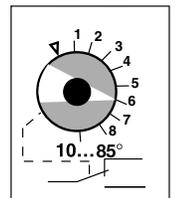



FIGURE F

#### Method 2 - See Figure G


1. Position the damper to the point at which you want the switch to activate. This may be done by using the manual override or by providing the appropriate proportional signal to EFB24, EFX24... modulating type actuator. The position of the switch pointer is not important during this step.
2. Insert the crank into the hexagon shaped hole located in the center of the adjustable switch pointer.
3. Gently rotate the switch pointer to just past the switch point indicating arrow as shown.

#### EFB, EFX... Series

##### Actuator after locking

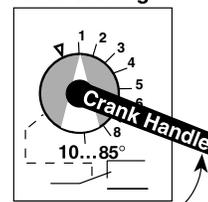

##### Switch operates

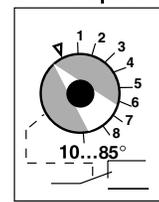

##### Switch does not operate

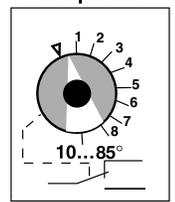


FIGURE G


# KH-EFB Crank Arm

## Including Retaining Ring




The KH-EFB crank arm is used in non-direct coupled mounting applications. The KH-EFB may also be used to simultaneously direct couple to a damper shaft and provide an additional crank arm connection to a second damper.

**KH-EFB** For round shafts up to 1.05" or square shafts up to 11/16"

### Dimensions (Inches [mm])

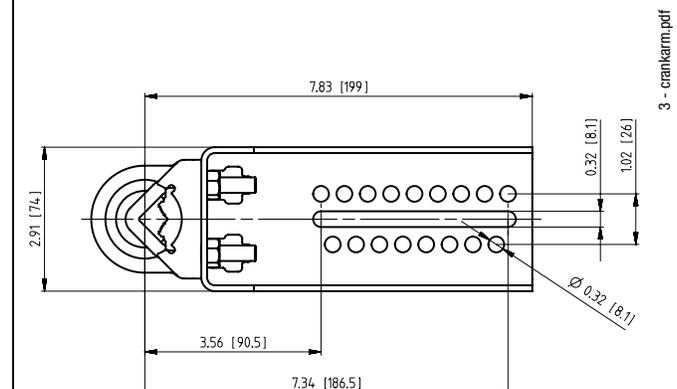

 **NOTE:** The KH-EFB crank arm is designed to attach itself with the K9-2 clamp. The supplied rod must be used when the actuator is not direct coupled onto a shaft.

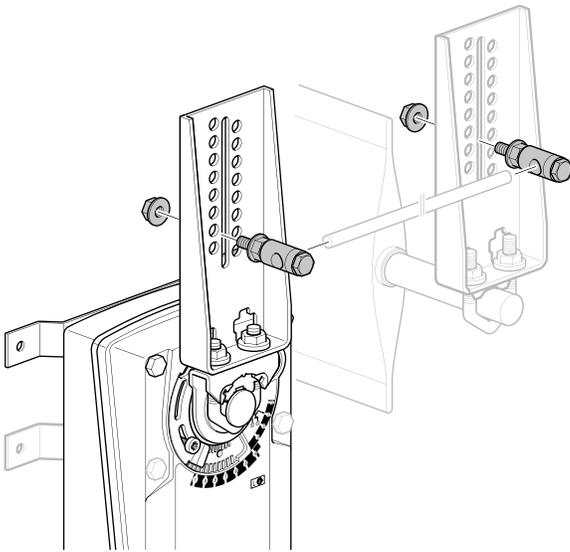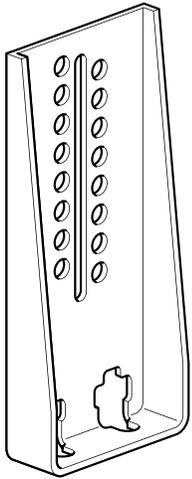

Non-direct mounting with ZG-EFB crank arm adaptor kit

### General

The EFB, EFX series actuators utilize both DC Motors and brushless DC motor technology. The EFB, EFX uses this motor in conjunction with an Application Specific Integrated Circuit (ASIC). In the On/Off versions of the EFB and EFX, the ASIC monitors and controls the actuator's rotation and a digital rotation sensing function to prevent damage to the actuator. The EFB24, EFX24... modulates type actuators incorporate a built in microprocessor. The microprocessor provides the intelligence to the ASIC to provide a constant rotation rate and knows the actuator's exact zero position.

### Brushless DC Motor Operation

Belimo's brushless DC motor spins by reversing the poles of stationary electromagnets housed inside of a rotating permanent magnet. The electromagnetic poles are switched by a special ASIC circuit developed by Belimo. Unlike the conventional DC motor, there are no brushes to wear or commutators to foul.

### Overload Protection

The EFB, EFX series actuators are protected from overload at all angles of rotation. The ASIC circuit constantly monitors the rotation of the DC motor inside the actuator and stops the pulses to the motor when it senses a stall condition. The DC motor remains energized and produces full rated torque to the load. This helps ensure that dampers are fully closed and that edge and blade seals are always properly compressed.

### Motor Position Detection


Belimo brushless DC motors eliminate the need for potentiometers for positioning in modulating type actuators. Inside the motor are three "Hall Effect" sensors. These sensors detect the spinning rotor and send pulses to the microprocessor which counts the pulses and calculates the position to within 1/3 of a revolution of the motor.

### Control Accuracy and Stability


-SR and MFT EF actuators have built-in brushless DC motors which provide better accuracy and longer service life.

The -SR and MFT EF actuators are designed with a unique non-symmetrical deadband. The actuator follows an increasing or decreasing control signal with a 80 mV resolution. If the signal changes in the opposite direction, the actuator will not respond until the control signal changes by 200 mV. This allows these actuators to track even the slightest deviation very accurately, yet allowing the actuator to "wait" for a much larger change in control signal due to control signal instability.

**EF Actuator responds to an 80 mV signal when not changing direction from stop**

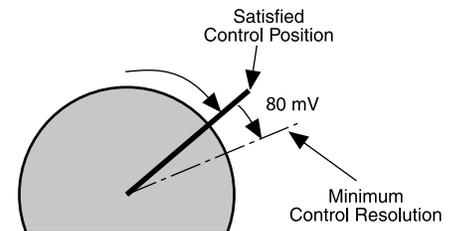

**EF Actuator responds to a 200 mV signal when reversing direction from stop position.**

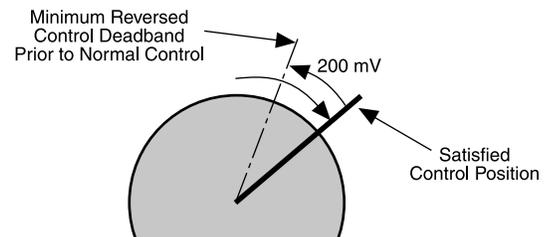

**Note:** Resolution is a percentage of operating range. 1% in one direction, 2.5% when changing direction. 2-10 VDC control example shown above.

**WARNING** The wiring technician must be trained and experienced with electronic circuits. Disconnect power supply before attempting any wiring connections or changes. Make all connections in accordance with wiring diagrams and follow all applicable local and national codes. Provide disconnect and overload protection as required. Use copper, twisted pair, conductors only. If using electrical conduit, the attachment to the actuator must be made with flexible conduit.

**Always read the controller manufacturer's installation literature carefully before making any connections.** Follow all instructions in this literature. If you have any questions, contact the controller manufacturer and/or Belimo.

### Transformers

The EFB24, EFX24...actuators require a 24 VAC class 2 transformer and draws a maximum of 16 VA per actuator. The actuator enclosure cannot be opened in the field, there are no parts or components to be replaced or repaired.

- EMC directive: 2004/108/EC
- Software class A: Mode of operation type 1
- Low voltage directive: 2006/95/EC

**CAUTION:** It is good practice to power electronic or digital controllers from a separate power transformer than that used for actuators or other end devices. The power supply design in our actuators and other end devices use half wave rectification. Some controllers use full wave rectification. When these two different types of power supplies are connected to the same power transformer and the DC commons are connected together, a short circuit is created across one of the diodes in the full wave power supply, damaging the controller. Only use a single power transformer to power the controller and actuator if you know the controller power supply uses half wave rectification.

### Multiple Actuators, One Transformer

Multiple actuators may be powered from one transformer provided the following rules are followed:

1. The TOTAL current draw of the actuators (VA rating) is less than or equal to the rating of the transformer.
2. Polarity on the secondary of the transformer is strictly followed. *This means that all No. 1 wires from all actuators are connected to the common leg on the transformer and all No. 2 wires from all actuators are connected to the hotleg.* Mixing wire No. 1 & 2 on one leg of the transformer will result in erratic operation or failure of the actuator and/or controls.

### Multiple Actuators, Multiple Transformers

Multiple actuators positioned by the same control signal may be powered from multiple transformers provided the following rules are followed:

1. The transformers are properly sized.
2. All No. 1 wires from all actuators are tied together and tied to the negative leg of the control signal. See wiring diagram.

### Wire Length for EFB..., EFX... Actuators

Keep power wire runs below the lengths listed in the **Figure H**. If more than one actuator is powered from the same wire run, divide the allowable wire length by the number of actuators to determine the maximum run to any single actuator.

Example: 3 actuators, 16 Ga wire  
 $225 \text{ Ft} \div 3 \text{ Actuators} = 75 \text{ Ft. Maximum wire run}$

MAXIMUM WIRE LENGTH FOR 16VA			
Wire Size	Max. Feet.	Wire Size	Max. Feet
12 Ga	550 Ft.	18 Ga	145 Ft.
14 Ga	360 Ft.	20 Ga	75 Ft.
16 Ga	225 Ft.	22 Ga	37 Ft.

**FIGURE H**

### Wire Type and Wire Installation Tips

For most installations, 18 or 16 Ga. cable works well with the EFB24, EFX24...actuators. Use code-approved wire nuts, terminal strips or solderless connectors where wires are joined. It is good practice to run control wires unspliced from the actuator to the controller. If splices are unavoidable, make sure the splice can be reached for possible maintenance. Tape and/or wire-tie the splice to reduce the possibility of the splice being inadvertently pulled apart.

The EFB24, EFX24... proportional actuators have a digital circuit that is designed to ignore most unwanted input signals (pickup). In some situations the pickup may be severe enough to cause erratic running of the actuator. For example, a large inductive load (high voltage AC wires, motors, etc.) running near the power or control wiring may cause excessive pickup. To solve this problem, make one or more of the following changes:

1. Run the wire in metallic conduit.
2. Re-route the wiring away from the source of pickup.
3. Use shielded wire (Belden 8760 or equal). Ground the shield to an earth ground. **Do not** connect it to the actuator common.

### Initialization of the -SR and MFT

When power is initially applied, the actuator will first release its manual preload position (This assumes a manual position has been set). The actuator will then rotate to the full fail-safe position. At this point the microprocessor recognizes that the actuator is at full fail-safe and uses this position as the base for all of its position calculations. The microprocessor will retain the initialized zero during short power failures of up to 20 seconds. The -SR and MFT will also return to its position prior to the 20-second-or-less power loss. For power failures greater than 20 seconds, the actuator would naturally return to its full fail-safe position prior to the microprocessor losing its memory. The actuator will also re-initialize if the manual position mechanism is used.

EFB24-SR, EFX24-SR Electrical Check-Out Procedure				
STEP	Procedure	Expected Response	Gives Expected Response Go To Step...	Does Not Give Expected Response Go To Step...
1.	Control signal is applied to actuator.	Actuator will move to its "Control Signal" position.	Actuator operates properly <b>Step 7.</b>	No response at all <b>Step 2.</b> Operation is reversed <b>Step 3.</b> Does not drive toward "Control Signal Position" <b>Step 4.</b>
2.	Check power wiring. Correct any problems. <b>See Note 1.</b>	Power supply rating should be the total power requirement of the actuator(s). Minimum voltage of 19.2 VAC or 21.6 VDC.	Power wiring corrected, actuator begins to drive <b>Step 1.</b>	Power wiring corrected, actuator still does not drive <b>Step 4.</b>
3.	Turn reversing switch to the correct position. Make sure the switch is turned all the way left or right.	Actuator will move to its "Control Signal" position.	Actuator operates properly <b>Step 7.</b>	Does not drive toward "Control Signal Position" <b>Step 4.</b>
4.	Make sure the control signal positive (+) is connected to Wire No. 3 and control signal negative (-) is connected to wire No. 1. Most control problems are caused by reversing these two wires. Verify that the reversing switch is all the way CCW or CW.	Drives to "Control Signal" position.	Actuator operates properly <b>Step 7.</b>	<b>Step 5.</b>
5.	Check input signal with a digital volt meter (DVM). Make sure the input is within the range of the actuator. <b>NOTE:</b> The input signal must be above the 2 VDC or 4 mA to have the actuator move.	Input voltage or current should be $\pm 1\%$ of what controller's adjustment or programming indicates.	Controller output (actuator input) is correct. Input Polarity Correct <b>Step 6.</b>	Reprogram, adjust repair or replace controller as needed <b>Step 1.</b>
6.	Check damper torque requirement.	Torque requirement is actuator's minimum torque.	Defective Actuator. Replace Actuator - <b>See Note 2.</b>	Recalculate actuator requirement and correct installation.
7.	Actuator works properly. Test controller by following controller manufacturer's instructions.			

- NOTE 1** Check that the transformer(s) are sized properly.
- If a common transformer is used, make sure that polarity is observed on the secondary. This means connect all No. 1 wires to one leg of the transformer and all No. 2 wires to the other leg of the transformer.
  - If multiple transformers are used with one control signal, make sure all No. 1 wires are tied together and tied to control signal negative (-).
  - Controllers and actuators must have separate 24 VAC/VDC power sources.
- NOTE 2** If failure occurs within 5 years from original purchase date, notify Belimo and give details of the application.